


# Introduction

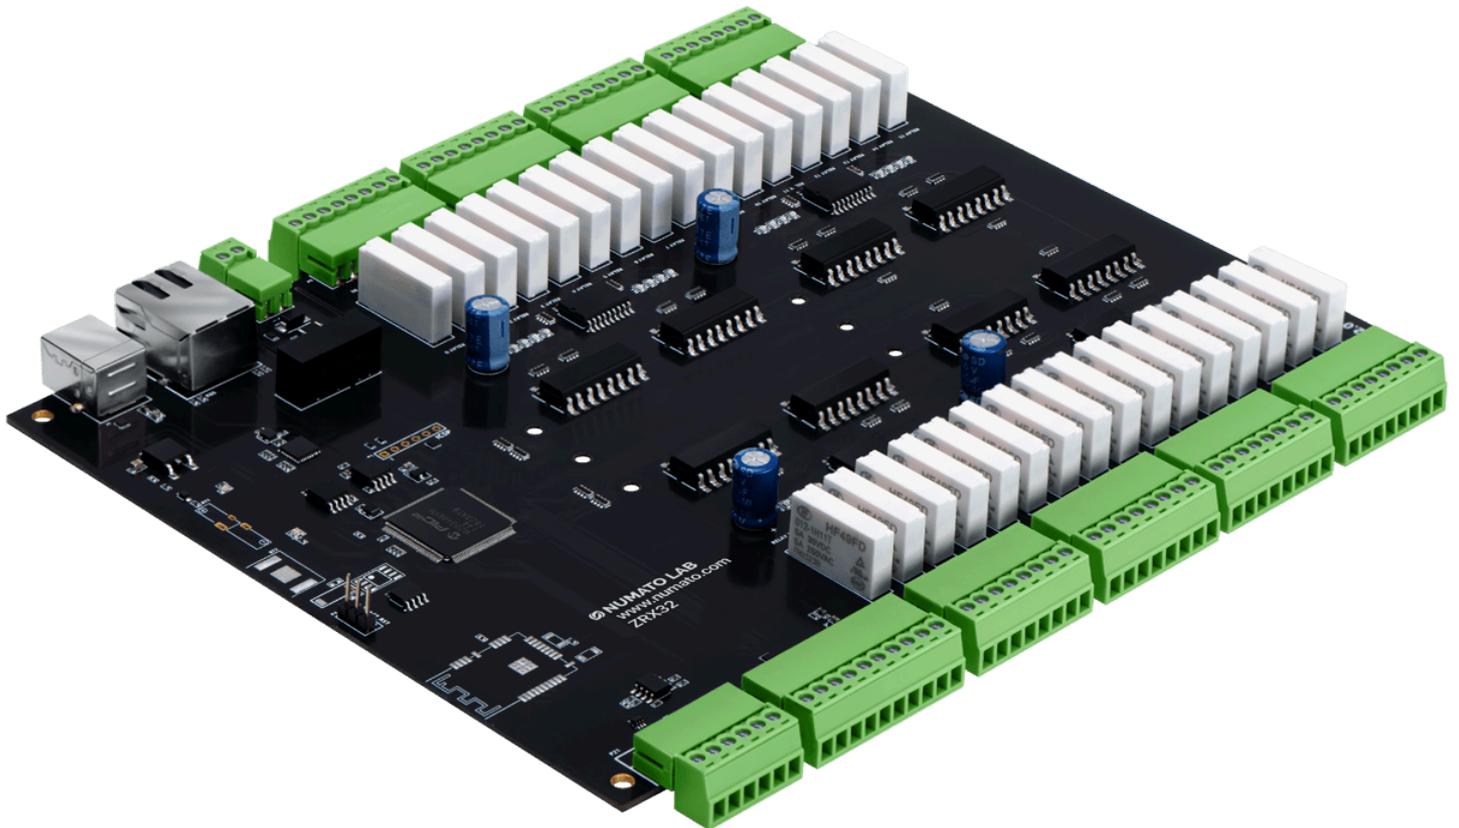

([https://numato.com/help/wp-content/uploads/2020/03/ZRX32\\_2\\_1200x1200.png](https://numato.com/help/wp-content/uploads/2020/03/ZRX32_2_1200x1200.png))

Numato Lab's ZRX16/32/64 Channel DIN Rail compatible Modbus RTU/TCP Relay Module with Digital IO and Analog Inputs offers great flexibility at lower cost. Ease of use and wider operating system compatibility are the primary goals behind this product's design. Built-in USB to serial conversion allows the module to be used without any USB specific knowledge. Industry-standard Modbus protocol support allows this product to be used with most automation software that supports Modbus. For power users, this module can be controlled by writing programs in various programming languages of their choice.

Features:

- Industry-standard Modbus protocol support
- DIN Rail compatible
- 16/32/64 Mechanical Relay with contact rating up to 250V/5A each
- 8 TTL (3.3V) compatible Digital IOs
- 8/6 analog inputs with 12-bit resolution (multiplexed with Digital IOs)
- USB interface with CDC support. As easy as using a serial port, no USB knowledge required
- Fully isolated design with optocouplers and built-in DC-DC converter
- Relay contacts available on easy to access screw terminals
- 12V external power supply (included)
- Can be controlled by using industry-standard automation applications or custom applications

Some of the possible uses of this module include

- Home Automation
- Lighting Control
- Garden Equipment Control
- Industrial Automation
- Test Fixtures
- DIY and Hobby

This product is compatible with the following operating systems:

- Windows XP and later versions (Windows 7, 8/8.1, 10 and future versions)
- Windows 7 Embedded and later
- Linux
- Mac OS X
- Android
- Or any other operating system that supports USB CDC devices.

And these are some of the languages that can be used for programming:

- C/C++
- Visual Basic (VB6, VB2008, VB2010 express and other editions)
- Visual Basic for Applications (Microsoft Office VBA)
- Perl
- Python
- JAVA
- Android
- JavaScript (Node.js)
- LabVIEW
- And many more...

This product has 16/32/64 onboard relays and associated drivers capable of controlling a variety of devices including lamps, motors, locks etc... (Please see recommendations for using this product with inductive loads elsewhere in this document). This module also includes General Purpose I/Os, and analog inputs (multiplexed with GPIOs) that can be accessed over USB

interface for extended functionality. The module communicates with host PC over full speed USB link, RS485, and Ethernet interface. When connected to PC using USB/RS485, the module will appear as a serial port in Windows Device Manager (or a serial tty device in Linux and Mac).

## How to Use Prodigy Relay Modules

Using this product is very easy, thanks to supporting industry-standard Modbus protocol, the RTU and the TCP/IP network interface that allows the device to be used with most readily available Data Communication Test Software like QModMaster. This document has more information about using this device with the following software. But in no way limited to this software though.

- Windows
  - QModMaster
  - Radzio! Modbus Master Simulator
- Linux
  - Coming soon
- Mac OS X
  - Coming soon

Using this product with RTU involves the following simple steps.

1. Connect the device using a USB A to B cable or a USB to RS485 converter to the host system
2. Install driver if applicable
3. Open the COM port corresponding to the device using software that supports Modbus
4. Read/Write Coils and Registers
5. Optionally write a script or custom application to automate your task

Using this product with TCP/IP Network interface involves the following steps.

1. Connect the device using a CAT 5e Ethernet Cable(Straight through cable) to the host system
2. Connect to the IP corresponding to the device using software that supports Modbus TCP
3. Read/Write Coils and Registers
4. Optionally write a script or custom application to automate your task

All aspects of the above steps are covered in the following sections including step by step demonstration.

## Components/Tools Required


Along with your Prodigy ZRXxx device, you will need the items in the list below for easy and fast installation.

1. USB A to B cable (Included) – For USB Interface.

2. CAT 5e Ethernet Cable(Straight through cable) – For Ethernet Interface.
3. USB to RS-485 Converter – For RS485 Interface.
4. 12V Power Supply (Included).
5. Medium size Philips screwdriver.

## Connection Details

**IMPORTANT!** Please exercise the utmost caution while working with electrical mains or other high voltages. Failure to comply with safety regulations may result in injury and or death.

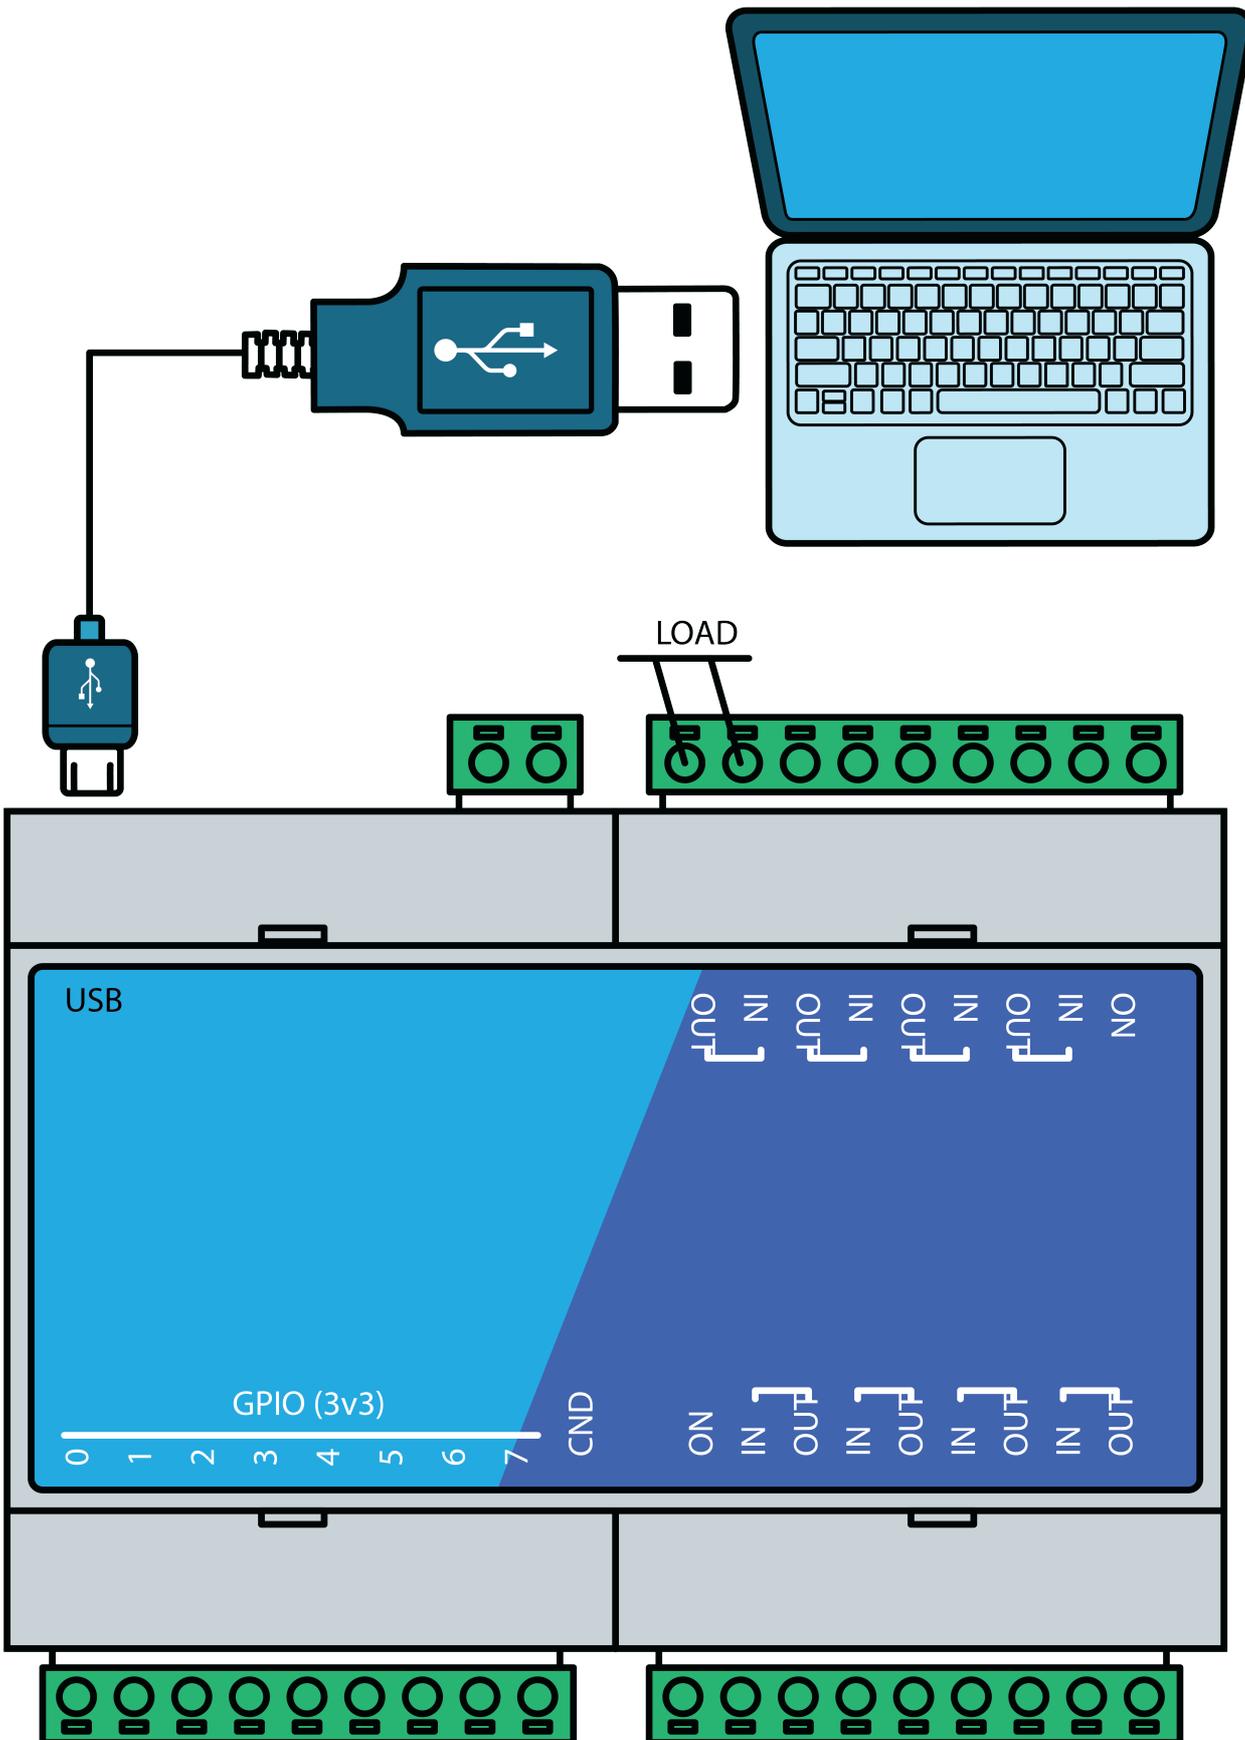

The picture above shows a basic connection diagram that can be used in most of the situations. The connection diagram is the same for both AC and DC loads. Please make sure to use a freewheeling diode or snubber circuit if the load is inductive. More details about using inductive loads are available elsewhere in this document. Use a USB A to B cable to connect the unit to a PC. It is important to make sure that the wires used to connect loads are sufficiently rated to

handle the expected load current. Exercise caution while working with high voltages. Short circuits can cause damage to the module and the PC. The following sections identify individual connections in detail.

## USB Interface

The onboard full-speed USB controller helps a computer to communicate and control this module seamlessly. Use a USB A to B cable (Included) to connect the unit to a PC. The device can be connected directly to the host PC or connected through a compatible USB hub. For high-performance system integration, it is recommended to connect the device directly to one of the root ports.



## RS485 Interface

A USB to RS485 converter helps a computer to communicate and control this module seamlessly. Use a USB to RS485 converter to connect the unit to a PC. The device can be connected directly to the host PC or connected through a compatible USB hub. For high-performance system integration, it is recommended to connect the device directly to one of the root ports.

## Ethernet Interface




(<https://numato.com/blog/wp-content/uploads/2016/03/32-Channel-Ethernet-GPIO-Module-Ethernet-Port.jpg>)The onboard Ethernet port supports Ethernet 10Mbps transmission speed that helps a computer to communicate and control this module easily. There are two basic network configurations for this board/can be used in two ways.

1. Direct connection to Local Area Network(LAN) via common straight-through Ethernet cable. Eg: Connecting the module to a switch in a network.
2. Direct connection to a PC through a cross over Ethernet cable. Eg: Connecting the module directly to the PC. Some PC/Laptops can detect and adapt to the cable type. In such situations, a straight-through cable also can be used.

## Relay Contacts


Prodigy ZRX devices have 16/32/64 mechanical relays that can switch up to 5A of current. IN and OUT connections to the relays are available externally on screw terminals for easy user access. The relays are rated for AC and DC supply voltages. Please see the electrical parameter table for more details. Each relay has two contacts (IN, OUT). The contacts IN and OUT will be connected when the relay is turned ON and will be disconnected when the relay is turned OFF. The table below summarizes possible relay contact positions.

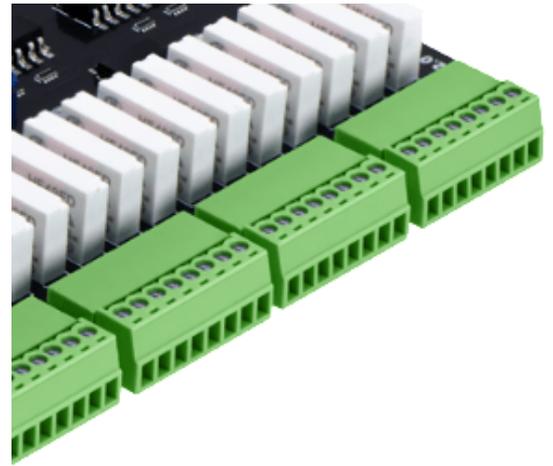

Relay State	Connection between IN and OUT
OFF	Open
ON	Close

## GPIO/Analog Inputs

In addition to the onboard relays, this Prodigy ZRX device has 8/6 General Purpose IO pins that can be used for various custom applications. Some of these or all of these pins depending on the device can be used as Analog to Digital Converter inputs as well. All IO pins support 3.3V TTL signals and the ADC input range is 0 to +3.3V. The ADC can acquire the analog signal at the resolution of 12 bits per sample. It is recommended to use a series resistor with the GPIO/ADC pins when interfacing with other circuits. In output mode, GPIOs can source up to 20mA. So no additional circuitry is needed to drive regular LEDs. A 470 Ohms series resistor is recommended for current limiting when connecting LED to a GPIO.

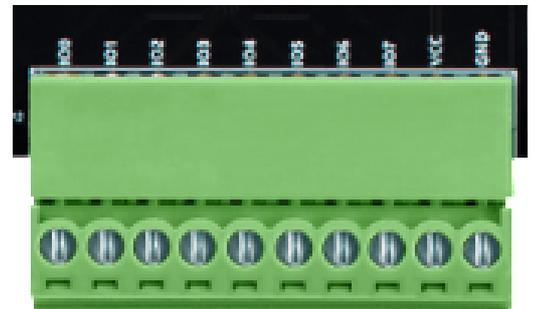

In contrast to GPIOs, Analog inputs can read voltages at any level between 0 to 3.3V. It is recommended to use a series resistor to protect the input from stray voltages and spikes. The internal Analog to Digital converter supports 12 bits resolution which is adequate for most applications. The table below summarizes the GPIO and Analog to Digital Converter input positions of ZRX16/32/64 on the screw terminals.

GPIO	ZRX16/32	ZRX64
IO0	ADC0	ADC0
IO1	ADC1	ADC1
IO2	ADC2	ADC2

<b>GPIO</b>	<b>ZRX16/32</b>	<b>ZRX64</b>
IO3	ADC3	ADC3
IO4	ADC4	ADC4
IO5	ADC5	ADC5
IO6	ADC6	-
IO7	ADC7	-
GND	GND	GND


## DC Power Supply

This product requires an external 12V power supply to function. **The power supply unit required is included with the product.** Connect the power supply to the connector on the product marked as +12V power. This product uses single power supply for the digital circuitry and the relay coils. An internal isolated DC-DC converter and a set of optocouplers ensure galvanic isolation between the digital circuitry and the relay coil driver circuitry.

## Driver Installation

### Installing Numato Lab CDC Driver - Windows Desktop and Server Editions

The driver package for Numato Lab's Prodigy models can be downloaded from the product page at <https://numato.com> (<https://numato.com>). To install the driver, unzip the contents of the downloaded driver package to a folder. Attach the USB cable to the PC and when asked by Windows device installation wizard, point to the folder where driver files are present. When the driver installation is complete, the module should appear in Windows Device Manager as a serial port. The picture below shows a Prodigy ZRX64 (<https://numato.com/product/prodigy-zrx-series-16-32-64-channel-usb-tcp-modbus-relay-module-with-analog-and-digital-inputs>) visible in Windows Device Manager. For other ZRX devices, the name will be different but how the device is displayed and used is exactly the same.

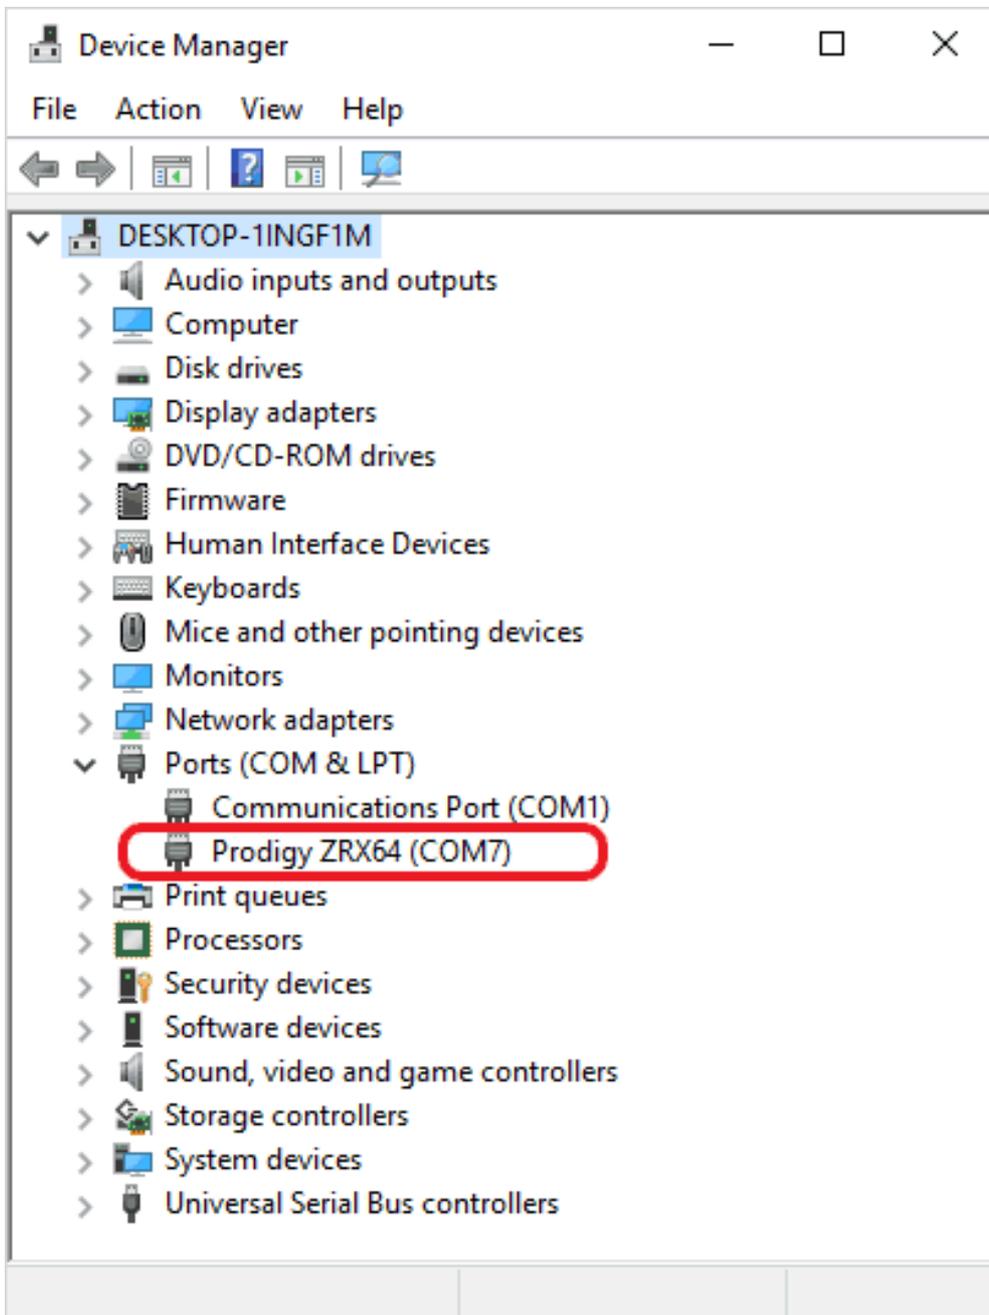

Note down the name of the serial port (COM1, COM2, etc.). This information is required to control the module from the PC.

You may notice that the driver package does not come with a .sys or .exe file as most driver packages do and are expected to be that way. The driver binary necessary in this case is shipped with all copies of Windows Desktop/Server editions and gets installed automatically while Windows is installed for the first time. The .inf and .cat files present in the driver package downloaded from <http://numato.com> (<https://numato.com>) merely associate this pre-existing driver with the attached Numato Lab device.

The following video demonstrates how to install the driver on Windows 10.

//player.vimeo.com/video/164672025?title=0&byline=0&portrait=0&color=ffffff

## Installing on Windows Embedded Editions


Windows Embedded editions do not install the infrastructure necessary for USB CDC by default in favor of a smaller footprint. This will cause the driver install to fail unless the necessary files are manually installed prior to installing the driver. Please follow the steps below to install the prerequisites and driver correctly. These steps are tested on Windows 7 Embedded Edition. The installation procedure may vary for other versions of Windows Embedded. Please contact Microsoft for more information.

1. Locate *winemb-inf-mdmcpq.cab* on Win 7 Embedded DVD/ISO image
2. Copy *winemb-inf-mdmcpq.cab* to a folder Ex: *C:Temp*
3. Run command *DISM.exe /online /Add-Package /PackagePath:C:Temp*
4. Wait for Windows to restart (Restart machine manually if DISM does not restart the machine automatically)
5. After the reboot is complete, plug the device to a USB port and install driver normally (Driver is available for download at the product page)

For more information or for additional help on Windows Embedded editions, please contact Microsoft or your Windows Embedded reseller

## Installing on Linux

To use any device that uses USB CDC protocol with Linux, USB CDC driver needs to be compiled into the kernel. **Fortunately, most Linux distributions (Ubuntu, Redhat, Debian, etc..) have this driver pre-installed.** The chances of you requiring to rebuild the kernel to include the USB CDC driver is very slim. When connected to a Linux machine, this product should appear as a serial port under `/dev` directory. Usually, the name of the device will be `ttyACMx` or similar. The name may be different depending on the Linux distribution you have. The image below shows the result of `ls /dev` command on a Linux Mint system with a USB GPIO/Relay device attached.

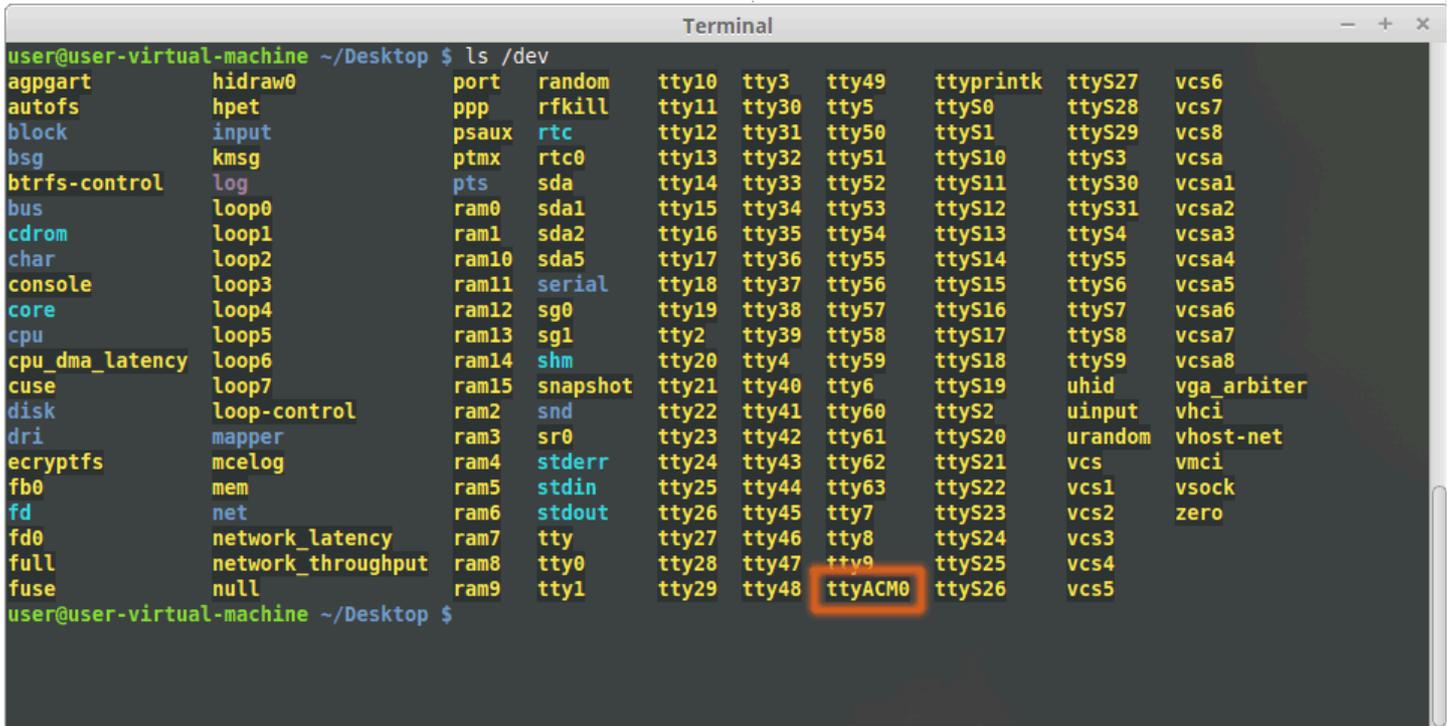

```

user@user-virtual-machine ~/Desktop $ ls /dev
agpgart      hidraw0      port          random        tty10         tty3          tty49         ttyprintk     ttyS27        vcs6
autofs       hpet         ppp           rfkill        tty11         tty30         tty5          ttyS0          ttyS28        vcs7
block        input        psaux        rtc           tty12         tty31         tty50         ttyS1          ttyS29        vcs8
bsg          kmsg         ptmx          rtc0          tty13         tty32         tty51         ttyS10         ttyS3         vcsa
btrfs-control log           pts           sda           tty14         tty33         tty52         ttyS11         ttyS30        vcsa1
bus          loop0        ram0          sda1          tty15         tty34         tty53         ttyS12         ttyS31        vcsa2
cdrom        loop1        ram1          sda2          tty16         tty35         tty54         ttyS13         ttyS4         vcsa3
char         loop2        ram10         sda5          tty17         tty36         tty55         ttyS14         ttyS5         vcsa4
console      loop3        ram11         serial        tty18         tty37         tty56         ttyS15         ttyS6         vcsa5
core         loop4        ram12         sg0           tty19         tty38         tty57         ttyS16         ttyS7         vcsa6
cpu          loop5        ram13         sg1           tty2           tty39         tty58         ttyS17         ttyS8         vcsa7
cpu_dma_latency loop6        ram14         shm           tty20         tty4           tty59         ttyS18         ttyS9         vcsa8
cuse         loop7        ram15         snapshot      tty21         tty40         tty6          ttyS19         uhid          vga_arbiter
disk         loop-control ram2           snd           tty22         tty41         tty60         ttyS2          uinput        vhci
dri          mapper       ram3           sr0           tty23         tty42         tty61         ttyS20         urandom       vhost-net
ecryptfs     mcelog       ram4           stderr        tty24         tty43         tty62         ttyS21         vcs           vmci
fb0          mem          ram5           stdin         tty25         tty44         tty63         ttyS22         vcs1         vsock
fd           net          ram6           stdout        tty26         tty45         tty7          ttyS23         vcs2         zero
fd0          network_latency ram7           tty           tty27         tty46         tty8          ttyS24         vcs3
full         network_throughput ram8           tty0          tty28         tty47         tty9          ttyS25         vcs4
fuse         null         ram9           tty1          tty29         tty48         ttyACM0       ttyS26         vcs5
user@user-virtual-machine ~/Desktop $

```


(<https://docs.numato.com/wp-content/uploads/2016/01/LinuxDeviceListing.png>)

In this particular case, the device shows up as `ttyACM0` (highlighted in orange color) but it could be `ttyACM1` or `ttyACM2`, etc... depending on the specific system and other connected devices. Once the device is visible under `/dev` directory, it can be treated just like any other serial device. Commands can be sent to the device using any mechanism that is valid for regular serial ports such as `screen` command or Serial Terminal Emulation applications. If there is more than one device connected to the same host computer, each device will be displayed as separate serial devices with unique names. These separate serial devices can be used to control individual devices attached.

## Installing on Mac OSX

**Mac OSX is usually shipped with USB CDC driver pre-installed.** When connected to a Mac computer, this product should appear as a serial port under `/dev` directory. Usually, the name of the device will be `tty.usbserialportx` or `tty.usbmodemx` or similar. The name may be different

depending on the Mac OSX version you have. The image below shows the result of `ls /dev/*usb*` command on a Mac OSX Yosemite system with a USB GPIO/Relay device attached.

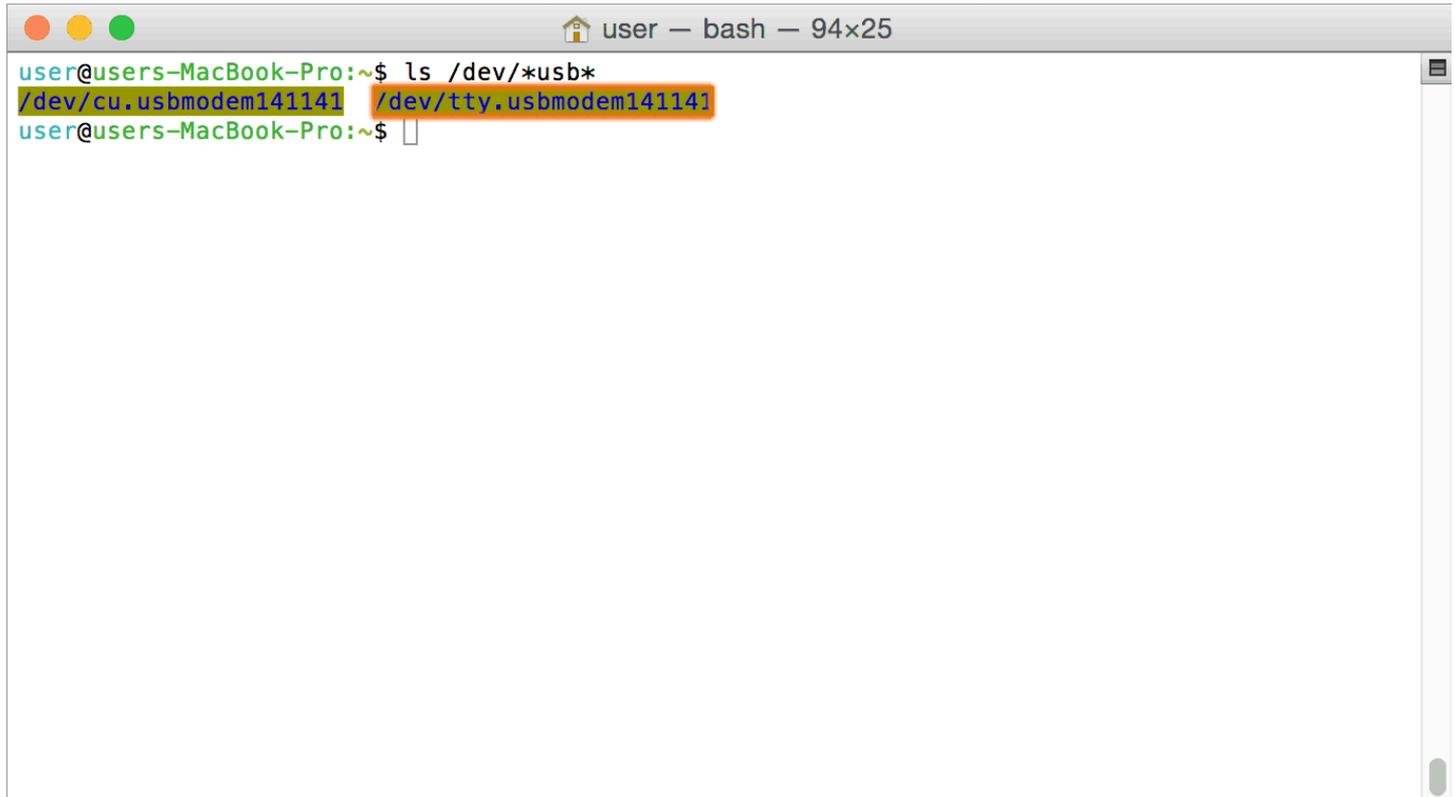

```
user@users-MacBook-Pro:~$ ls /dev/*usb*  
/dev/cu.usbmodem141141 /dev/tty.usbmodem141141  
user@users-MacBook-Pro:~$
```

(<https://docs.numato.com/wp-content/uploads/2016/01/ListingUSBSerialDevices.png>)

In this particular case, the device shows up as `tty.usbmodem141141` (highlighted on orange color) but it could be any name starting `tty.usbmodem` or even a completely different name depending on the exact version of operating system and other connected devices. Once the device is visible under `/dev` directory, it can be treated just like any other serial device. If there is more than one device connected to the same host computer, each device will be displayed as separate serial devices with unique names. These separate serial devices can be used to control individual devices attached.

## The Modbus Interface

Prodigy ZRX series Modbus Relay Modules use the Modbus protocol for its primary interface. Modbus is a simple yet powerful industry-standard protocol that was originally developed by Modicon systems for transmitting/receiving information over serial links. Prodigy devices use USB/RS485 and TCP/IP as physical interfaces. Since the device uses the USB interface, it represents itself to the operating system as a classic serial device which makes Modbus a very suitable protocol for this product. This also completely hides the complexities of using USB protocol and thus making Prodigy devices as easy to use as a normal serial device.

When working with Modbus, there are two important aspects of the protocol that the user may need to understand. 1) How to send and receive Modbus packets 2) The Modbus Register Map. One needs to learn details on the building, sending and receiving Modbus packets only if he/she is engaged in low-

level library or application development (and thus not covered in this document). For an end-user who wishes to use Prodigy devices with an off the shelf software, understanding of Modbus register map would be sufficient.

**IMPORTANT!** Working with single interface at a time is recommended.

## Modbus Register Map

### Coils

Coils are a single bit data type that represents the output state of a single bit entity such as Relay or a GPO. Please note that Coils are always used to represent an output quantity. Writing to a coil will update the output quantity with the value written. Reading a coil will return the data that was previously written. For example, writing “1” to a coil that represents a relay will turn ON the relay and vice versa. Reading from a Coils that represents a turned OFF relay will return value “0”. The Address in the table below shows the position of each coil within the Modbus register map. There are 8 coils corresponding to the 8 GPOs and another set of 16/32/64 coils corresponding to the Relays on ZRX16/ZRX32/ZRX64. The data address of the Coils can be used to access the corresponding Relay or GPO.

No.	Name	Coil Number	Data Address	Size	Comments
<b>ZRXxx GPOs</b>					
1	GPO0	1	0	1	GPO0 ON/OFF
2	GPO1	2	1	1	GPO1 ON/OFF
3	GPO2	3	2	1	GPO2 ON/OFF
4	GPO3	4	3	1	GPO3 ON/OFF
5	GPO4	5	4	1	GPO4 ON/OFF
6	GPO5	6	5	1	GPO5 ON/OFF
7	GPO6	7	6	1	GPO6 ON/OFF
8	GPO7	8	7	1	GPO7 ON/OFF
<b>ZRXxx Relays</b>					
9	Relay0	65	64	1	Relay0 ON/OFF
10	Relay1	66	65	1	Relay1 ON/OFF
11	Relay2	67	66	1	Relay2 ON/OFF
-	-	-	-	-	-

No.	Name	Coil Number	Data Address	Size	Comments
-	-	-	-	-	-
22	Relay13	78	77	1	Relay13 ON/OFF
23	Relay14	79	78	1	Relay14 ON/OFF
24	Relay15	80	79	1	Relay15 ON/OFF
<b>ZRX32/64 Relays Continued</b>					
25	Relay16	81	80	1	Relay16 ON/OFF
26	Relay17	82	81	1	Relay17 ON/OFF
27	Relay18	83	82	1	Relay18/ ON/OFF
-	-	-	-	-	-
-	-	-	-	-	-
38	Relay29	94	93	1	Relay29 ON/OFF
39	Relay30	95	94	1	Relay30 ON/OFF
40	Relay31	96	95	1	Relay31 ON/OFF
<b>ZRX64 Relays Continued</b>					
41	Relay32	97	96	1	Relay32 ON/OFF
42	Relay33	98	97	1	Relay33 ON/OFF
43	Relay34	99	98	1	Relay34 ON/OFF
-	-	-	-	-	-
-	-	-	-	-	-
-	-	-	-	-	-
68	Relay60	125	124	1	Relay60 ON/OFF
69	Relay61	126	125	1	Relay61 ON/OFF
70	Relay62	127	126	1	Relay62 ON/OFF
71	Relay63	128	127	1	Relay63 ON/OFF

## Discrete Inputs

Discrete Inputs are a single bit data type that represents the input state of a single bit entity such as a GPI. For example, by reading the Input bit corresponding to a GPI, the user can get the state of the logic (HIGH/LOW) externally applied to the GPI.

No.	Name	Input Number	Data Address	Size	Comments
<b>GPIs</b>					
1	GPI0	10001	0	1	GPI0 Status High/Low
2	GPI1	10002	1	1	GPI1 Status High/Low
3	GPI2	10003	2	1	GPI2 Status High/Low
4	GPI3	10004	3	1	GPI3 Status High/Low
5	GPI4	10005	4	1	GPI4 Status High/Low
6	GPI5	10006	5	1	GPI5 Status High/Low
7	GPI6	10007	6	1	GPI6 Status High/Low
8	GPI7	10008	7	1	GPI7 Status High/Low

## Holding Registers

No.	Name	Input Number	Data Address	Size	Access	Comments
<b>Relay Related Registers</b>						
1	Relay Timer Registers	40001	0	48 for ZRX16 96 for ZRX32 192 for ZRX64	WR	3*16=48 Relay timer registers for 16 relays 3*32 = 96 Relay timer registers for 32 relays 3*64 = 192 Relay timer registers for 64 relays
2	Relay Fail safe Value Registers	40257	256	1 for ZRX16 2 for ZRX32 4 for ZRX64	WR	Fail Safe value registers for relays.
3	Relay Power ON value Register	40261	260	1 for ZRX16 2 for ZRX32 4 for ZRX64	WR	Power ON value registers for relays.
<b>GPIO Related Registers</b>						
4	GPO Timer Registers	40265	264	24	WR	3*8= 24 GPO timer registers for 8 GPOs
5	GPI Power ON Pullup Value Registers	40501	500	1	WR	Power ON Pull-up value register for GPIs

No.	Name	Input Number	Data Address	Size	Access	Comments
6	GPI Fail safe Pullup Value Registers	40517	516	1	WR	Fail Safe Pull-up value register for GPIs
7	GPI Power ON Pull down Value Registers	40533	532	1	WR	Power ON Pull down value register for GPIs
8	GPI Fail Safe Pull down Value Registers	40549	548	1	WR	Fail safe Pull down value register for GPIs
9	GPO Power ON Open drain Value Registers	40565	564	1	WR	Power ON Open drain value register for GPOs
10	GPO Fail safe Open drain value Registers	40581	580	1	WR	Fail safe Open drain value register for GPOs
11	GPIO Fail safe Value Registers	40597	596	1	WR	Fail safe value register for GPIOs
12	GPIO Power ON Value Registers	40605	604	1	WR	Power ON value register for GPIOs

### Watchdog Configuration Area

13	Watchdog Holding Registers	40613	612	3	WR	Watchdog Config, timer, timeout value registers
----	----------------------------	-------	-----	---	----	---

### Device Configuration Area

14	User ID	48051	8050	2	WR	Two registers (4 bytes) for storing custom user data.
15	USB Configuration Area	48101	8100	2	WR	Slave ID, protocol config value registers for USB Interface
16	RS485 Configuration Area	48165	8164	2	WR	Slave ID, Baud rate value registers for RS485 Interface
17	Ethernet Configuration Area	48229	8228	23	WR & RO	Host name, IP address, MAC etc... for Ethernet Interface

## Input Registers

No.	Name	Input Number	Data Address	Size	Access	Comments
<b>Device Info Area</b>						
1	Vendor ID	38001	8000	1	RO	
2	Product ID	38002	8001	1	RO	
3	OEM Vendor ID	38003	8002	1	RO	
4	OEM Product ID	38004	8003	1	RO	
5	HW major version and Minor version	38005	8004	1	RO	Hardware revision information.
6	Firmware major, minor version	38006	8005	1	RO	Firmware revision information
7	Register Map major, minor version	38009	8008	1	RO	Major and Minor versions for Modbus register map
<b>ZRXxx Analog Inputs</b>						
8	ADC0	30001	0	1	RO	ADC0 Value
9	ADC1	30002	1	1	RO	ADC1 Value
10	ADC2	30003	2	1	RO	ADC2 Value
11	ADC3	30004	3	1	RO	ADC3 Value
12	ADC4	30005	4	1	RO	ADC4 Value
13	ADC5	30006	5	1	RO	ADC5 Value
<b>ZRX16/32 Analog Inputs Continued</b>						
14	ADC6	30007	6	1	RO	ADC6 Value
15	ADC7	30008	7	1	RO	ADC7 Value

★ RO – Read Only ★ WO – Write Only ★ WR – Write/Read

## Register Formats

Let's look at how to write values to each register.

Holding registers and its format are explained in the table below:-

No.	Register	Register Format	Comments
<b>Relay Related Registers</b>			
1	Relay Timer Value Registers	- 2*16 bit Registers for 32 bit timer value for relays.	Register 1 - Lower Bytes of Timer value. Default Value - 0 Minimum Value to be written - 500h Register 2 - Higher Bytes of Timer Value. Default Value - 0
2	Relay Timer Config Register	- 16 bit register - Bit 0 - Enable Timer - Bit 1:2 - Timer Type - Bit 3:4 - Timer Action	Bit 0 :- 0 - Stops Timer 1 - Starts Timer Default Value - 0 ----- Bit 1:2 :- 00 - Single shot Timer 01 - Periodic Timer Default Value - 0 ----- Bit3:4 :- 00 - Relay OFF 01 - Relay ON 10 - Relay Toggle 11 - Reserved Default Value - 0
3	Relay Fail Safe Value Register	- 16 bit register for 16 Relays. - Each bit for each relay	Each bit represents relay status. 0 - Relay OFF 1 - Relay ON Default Value - 0
4	Relay Power ON Value Register	- 16 bit register for 16 relays - Each bit for each relay	Each bit represents relay status. 0 - Relay OFF 1 - Relay ON Default Value - 0
<b>GPIO Related Registers</b>			
5	GPO Timer Value Registers	- 2*16 bit Registers for 32 bit timer value for GPOs.	Register 1 - Lower Bytes of Timer value. Default Value - 0 Minimum Value to be written - 01F4h Register 2 - Higher Bytes of Timer Value. Default Value - 0

No.	Register	Register Format	Comments
6	GPO Timer Config Register	<ul style="list-style-type: none"> <li>- 16 bit register</li> <li>- Bit 0 - Enable Timer</li> <li>- Bit 1:2 - Timer Type</li> <li>- Bit 3:4 - Timer Action</li> </ul>	<p>Bit 0 :-            0 - Stops Timer            1 - Starts Timer            Default Value - 0            -----</p> <p>Bit 1:2 :-            00 - Single shot Timer            01 - Periodic Timer            Default Value - 0            -----</p> <p>Bit3:4 :-            00 - GPO OFF            01 - GPO ON            10 - GPO Toggle            11 - Reserved            Default Value - 0</p>
7	GPI Power ON Pull-Up Value Registers	<ul style="list-style-type: none"> <li>- 16 bit Register for 16 GPIs</li> <li>- Each bit for each GPI</li> </ul>	<p>Each bit to enable/Disable pull-up for the GPIs while power ON.            0 - Pull-Up Disabled            1 - Pull- Up Enabled            Default Value - 0</p>
8	GPI Power ON Pull-down Value Registers	<ul style="list-style-type: none"> <li>- 16 bit Register for 16 GPIs</li> <li>- Each bit for each GPI</li> </ul>	<p>Each bit to enable/Disable pull-down for the GPIs while Power ON.            0 - Pull-Down Disabled            1 - Pull- Down Enabled            Default Value - 0</p>
9	GPO Power ON Open Drain Value Register	<ul style="list-style-type: none"> <li>- 16 bit Register for 16 GPOs</li> <li>- Each bit for each GPO</li> </ul>	<p>Each bit to enable/Disable open drain for the GPOs while Power ON.            0 - Open drain Disabled            1 - Open drain Enabled            Default Value - 0</p>
10	GPI Fail Safe Pull-Up Value Registers	<ul style="list-style-type: none"> <li>- 16 bit Register for 16 GPIs</li> <li>- Each bit for each GPI</li> </ul>	<p>Each bit to enable/Disable pull-down for the GPIs while Fail safe occurs.            0 - Pull-Down Disabled            1 - Pull- Down Enabled            Default Value - 0</p>
11	GPI Fail Safe Pull-down Value Registers	<ul style="list-style-type: none"> <li>- 16 bit Register for 16 GPIs</li> <li>- Each bit for each GPI</li> </ul>	<p>Each bit to enable/Disable pull-down for the GPIs while Fail safe occurs.            0 - Pull-Down Disabled            1 - Pull- Down Enabled            Default Value - 0</p>

No.	Register	Register Format	Comments
12	GPO Fail Safe Open Drain Value Register	- 16 bit Register for 16 GPOs - Each bit for each GPO	Each bit to enable/Disable open drain for the GPOs while Fail safe occurs. 0 - Open drain Disabled 1 - Open drain Enabled Default Value - 0
13	GPIO Fail Safe Value Registers	- 16 bit Register for 8 GPOs - Bit 0:7 - Each bit for each GPO - Bit 8:15 - Each bit for Input/Output mode of GPIOs	Bit 0:7 :- Each bit represents GPO status. 0 - GPO OFF 1 - GPO ON Default Value - 0 ----- Bit 8:15 :- Each bit represents the Input/Output mode of corresponding GPIOs 0 - Output 1 - Input Default Value - 0
14	GPIO Power ON Value Registers	- 16 bit Register for 8 GPOs - Bit 0:7 - Each bit for each GPO - Bit 8:15 - Each bit for Input/Output mode of GPIOs	Bit 0:7 :- Each bit represents GPO status. 0 - GPO OFF 1 - GPO ON Default Value - 0 ----- Bit 8:15 :- Each bit represents the Input/Output mode of corresponding GPIOs 0 - Output 1 - Input Default Value - 0

### Watchdog Holding Registers

15	Watchdog config Register	-16 bit register to Enable/Disable watchdog timer - Bit 0 - ON Bit - Bit 1 - Mode Select Bit - Bit 2:15 - Reserved	Bit 0 :- 0 - Disable Watchdog Timer 1 - Enable Watchdog Timer Default Value - 0 ----- Bit 1 :- 0 - Default Mode 1 - Manual Mode(Reserved) Default Value - 0 ----- Bit 2:15 :- XX - Reserved Default Value - 0
----	--------------------------	---	---

No.	Register	Register Format	Comments
16	Watchdog timer Value Register	- 16 bit Register for watchdog timer value.	Fail safe occurs when this value reaches the timeout value. Default Value - 0
17	Watchdog timeout Value	- 16 bit Register for watchdog timeout value.	Represents at what time the fail safe should occur. Default Value - 0
<b>Common Configuration Holding Registers</b>			
18	User ID Holding Register	- 2*16 bit registers for User ID	4 bytes for User ID. Default Value - 0
<b>USB Configuration Holding Registers</b>			
19	Slave ID	- 16 bit register for USB Slave ID	Default Value - 1
20	Baud Rate	- 16 bit register for USB baud rate	Baud rate can be 9600, 19200, 38400, 57600, 115200 Default Value - 57600
21	Protocol Configuration	- 16 bit register for swap between protocols(RTU,JSON,XML) - Bit 0:2 - Config Bit	Bit 0 :- 0 - Disable RTU 1 - Enable RTU Default Value - 1 ----- Bit 1 :- 0 - Disable JSON 1 - Enable JSON Default Value - 0 ----- Bit 2 :- 0 - Disable XML 1 - Enable XML Default Value - 0
<b>RS485 Configuration Holding Registers</b>			
22	Slave ID	- 16 bit register for RS485 Slave ID	Default Value - 1
23	Baud Rate	- 16 bit register for RS485 baud rate	Baud rates - Values ----- 9600 - 10 or 0x000A 19200 - 11 or 0x000B 38400 - 12 or 0x000C 57600 - 13 or 0x000D 115200 - 14 or 0x000E Default Value - 10 or 0x000A
<b>Ethernet Configuration Holding Registers</b>			
24	Host Name	- 8*16 bit registers for host name	Host name length is limited to 16 characters

No.	Register	Register Format	Comments
25	IP address	- 2*16 bit registers for IP Address	IP V4 properties of Ethernet interface.
26	IP Mask	- 2*16 bit registers for IP Mask	
27	Default Gateway	- 2*16 bit registers for Default Gateway	
28	Primary DNS	- 2*16 bit registers for Primary DNS	
29	Secondary DNS	- 2*16 bit registers for Secondary DNS	
30	DHCP Enable	-16 bit register for DHCP Enable - Bit 0 - Enable Bit - If enabled, Get IP address automatically, or static IP configuration. - Disable DHCP to write IPV4 properties.	Bit 0 :- 0 - Disable DHCP 1 - Enable DHCP Default Value - 1 ----- Bit 1:15 :- X -Reserved Default Value - 0
31	TCP Port	- 16 bit registers for TCP Port	TCP port for Ethernet connection. Default value - 502
32	MAC Address	- 3*16 bit Read Only registers for MAC Address	MAC address of Ethernet interface

★ IP V4 properties of the Ethernet interface will be writable only if the DHCP is disabled.

Similarly, input registers' format is as follows:-

No.	Register	Register Format	Comments
1	Vendor ID	- 16 bit Register for Vendor ID	Default Value - 0x2A19
2	Product ID	- 16 bit Register for Product ID	ZRX64 - 0x2504 or 0x2501 ZRX32 - 0x2505 or 0x2502 ZRX16 - 0x2506 or 0x2503 Default Value - Depends on the Product
3	OEM Vendor ID	- 16 bit register for OEM Vendor ID	Default Value - 0
4	OEM Product ID	- 16 bit register for OEM Product ID	Default Value - 0
5	HW major version and Minor version	- 16 bit register for Hardware major and minor version	Hardware revision information. Default Value - 1
6	Firmware major, minor version	- 16 bit register for Firmware major and minor version	Firmware revision information. Default Value - 1

No.	Register	Register Format	Comments
7	Firmware bugfix/patch level	- 16 bit register for Firmware bugfix/patch level	Firmware bugfix/patch level Default Value - 0
8	PNV data format major, minor version	- 16 bit register for PNV data format major, minor version	PNV data format major, minor version Default Value - 1
9	Register Map major, minor version	- 16 bit register for Register map major and minor version	Major and Minor versions for Modbus register map Default Value - 1

## Controlling Prodigy ZRXxx using off the shelf software

Prodigy ZRX devices' support for Modbus protocol makes it easier to use with virtually any software that supports Modbus. This section of the document demonstrates how to use Prodigy ZRX devices with some of the software that is available in the market.

## Windows

### qModMaster


QModMaster is free software that emulates Modbus master and can be used to access any device that is Modbus compatible. QModMaster can be downloaded for free at <https://sourceforge.net/projects/qmodmaster/> (<https://sourceforge.net/projects/qmodmaster/>). Follow the steps below to see how to use Prodigy ZRX devices with QModMaster using RTU and TCP.

Download and install QModMaster.

To control the device via Modbus RTU, follow the simple steps given below:


#### Step 1:

Run QModMaster and select "Modbus RTU" from the Options menu. Enter Serial Port name and other settings as in the image below and click OK. Serial Port name must match the port name assigned to the device by the Operating System.

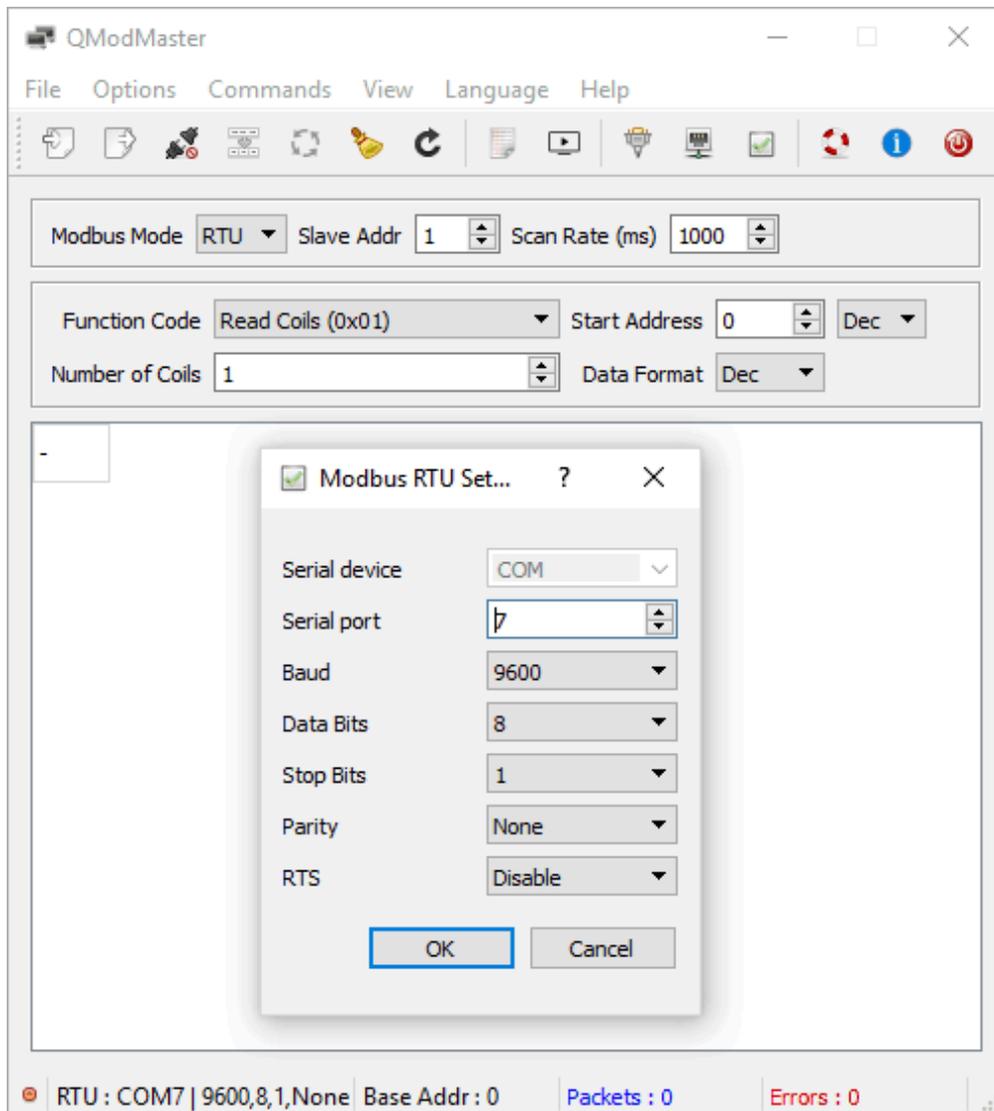

### Step 2:


1. Select RTU as Modbus mode.
2. Select the proper Slave ID of the device.
3. Then, click the “Connect” button to connect to the device.

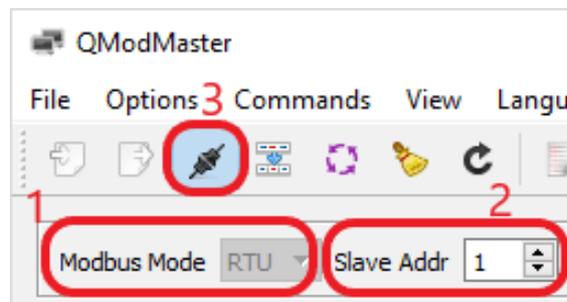

### Step 3:

1. Select the “Write Single Coil” function code in the Function Code combo box, enter the Data Address of the first Relay (Relay Index 0) in the Start Address box.
2. Enter value 1 (corresponds to Relay ON state) in the data cell.
3. Now click the Read/Write button to send the new value to the device.


If everything works fine, you will hear the relay clicks and any circuitry connected to the relay will be activated. To read the status of a Relay, the same sequence applies but select the “Read Coils” function code instead.

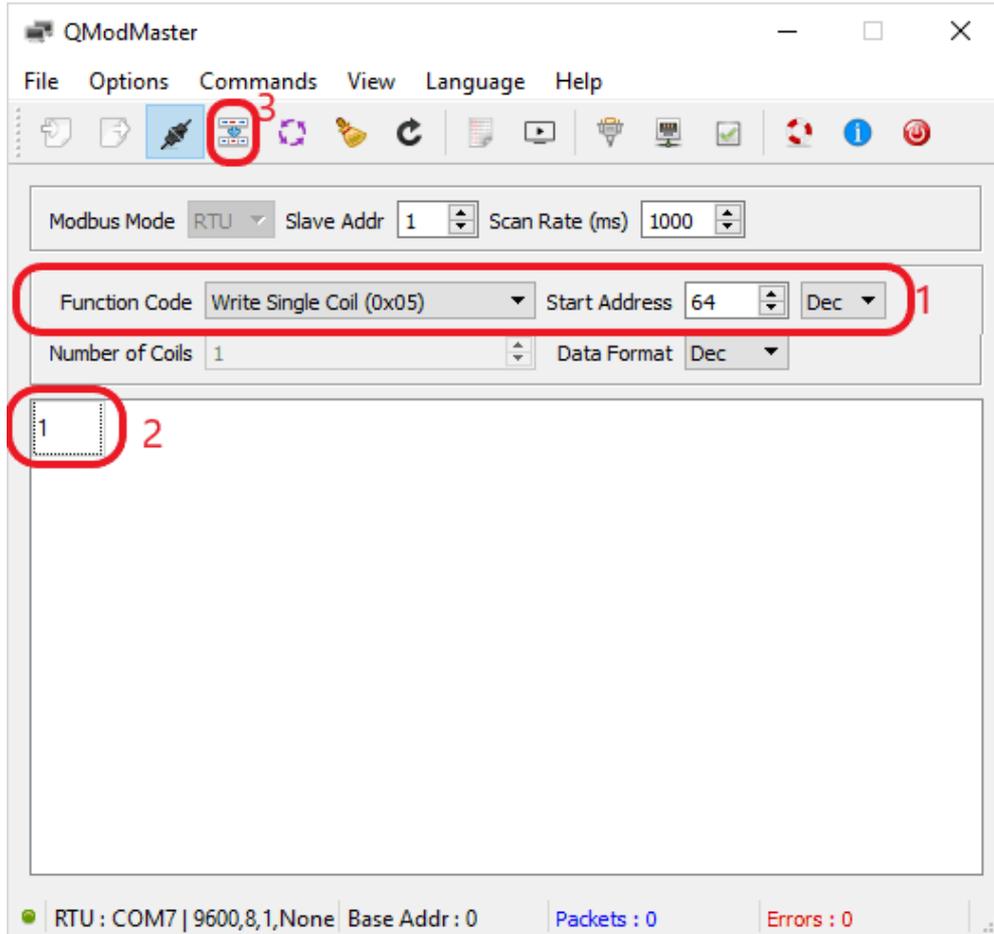

Similarly, to control the device via Modbus TCP, follow the steps below:


### Step 1:

Run QModMaster and select “Modbus TCP” from the Options menu. Enter the IP Address of the device and TCP port number as in the image below and click OK.

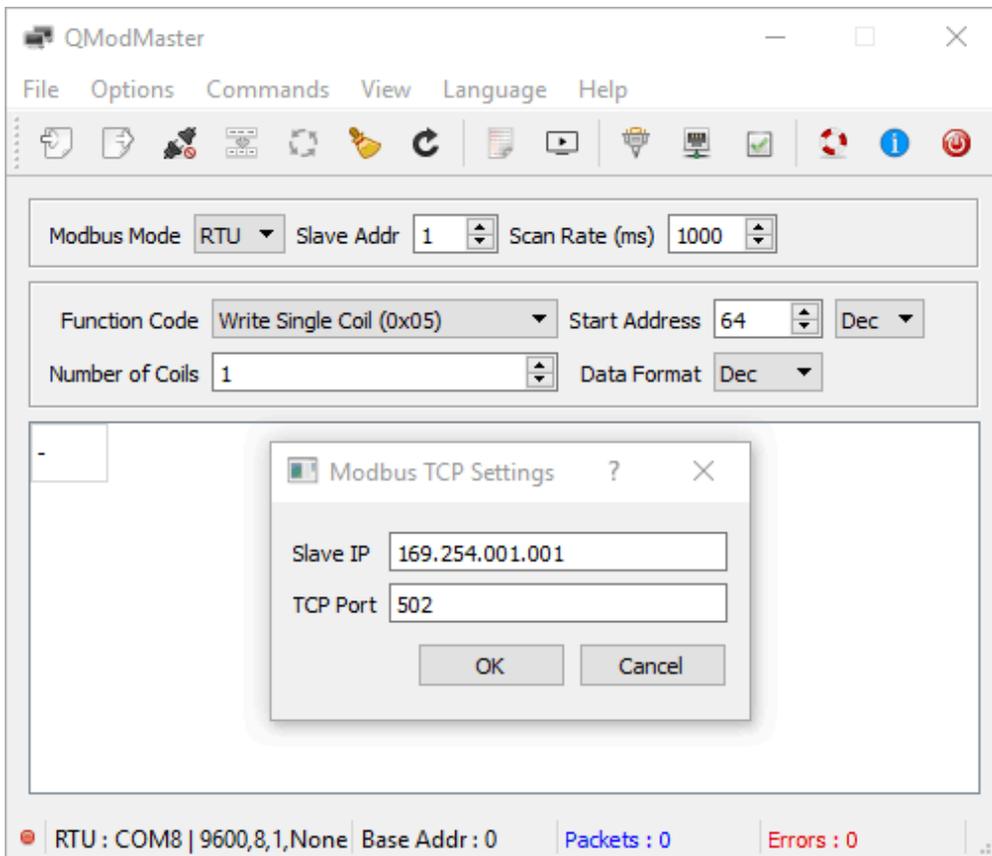

### Step 2:


1. Select TCP as Modbus mode.
2. Then, click the “Connect” button to connect to the device.

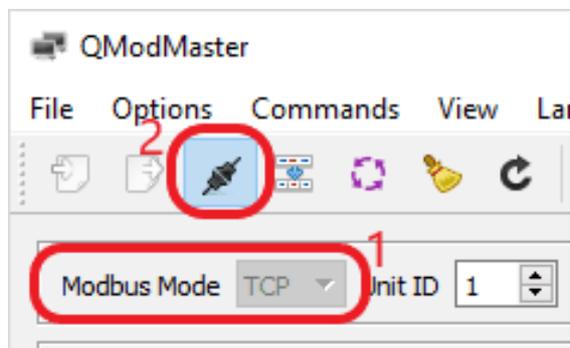

### Step 3:

1. Select the “Write Single Coil” function code in the Function Code combo box, enter the Data Address of the first Relay (Relay Index 0) in the Start Address box.
2. Enter value 1 (corresponds to Relay ON state) in the data cell.
3. Now click the Read/Write button to send the new value to the device.

If everything works fine, you will hear the relay clicks and any circuitry connected to the relay will be activated. To read the status of a Relay, the same sequence applies but select the “Read Coils” function code instead.

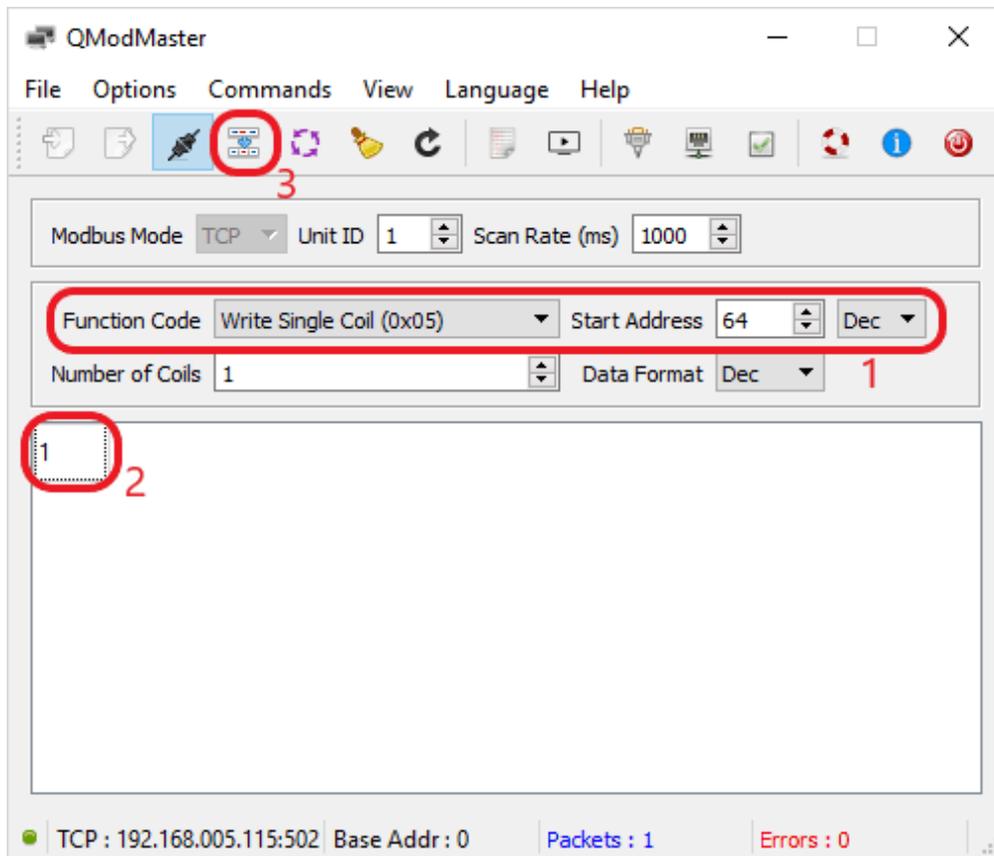

## Additional Information

### Using relay modules with inductive loads


It is important to take additional care when using relays with inductive loads. An inductive load can be pretty much anything that has a coil and works based on magnetic principles like Motors, Solenoids, and transformers. But in practice, even a wire longer than a few feet can display substantial inductance. Inductive loads produce back emf when the magnitude of the load current changes. The back emf can be in the order of tens or even hundreds of voltage (See this Wikipedia article

[http://en.wikipedia.org/wiki/Counter-electromotive\\_force](http://en.wikipedia.org/wiki/Counter-electromotive_force)

([https://en.wikipedia.org/wiki/Counter-electromotive\\_force](https://en.wikipedia.org/wiki/Counter-electromotive_force))). This effect is most

severe when power is disconnected from the

inductive load because the rate of change of current is maximum at that point. Even though the

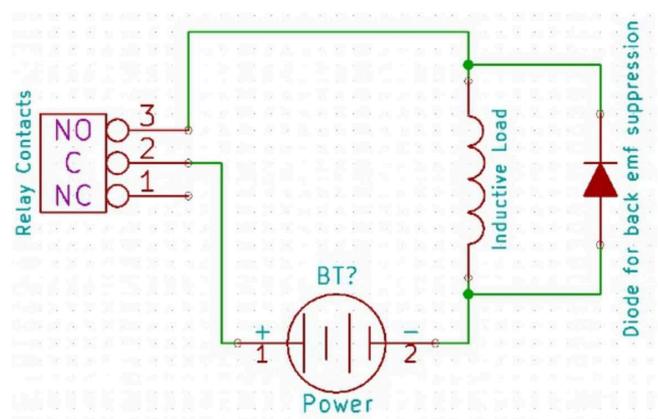

(<https://numato.com/blog/wp-content/uploads/2016/02/SnubberDiode.jpg>)

Diode As Snubber


back emf lives only for a very short time (a few milliseconds) it can cause sparks between the relay contacts and can deteriorate the contact quality over time and reduce the life span for the relays considerably.

So it is important to take countermeasures to suppress the back emf to acceptable levels to protect relay contacts. Usually, this requires connecting electronic devices in parallel with the load such that they absorb the high voltage components generated by the load. For solenoids, connecting a diode (fast switching diode is recommended) in parallel to the load (in reverse direction to the load current) is very effective. A diode used for this purpose is usually called a freewheeling diode. Please see the diagram on the right for connection details.

A capacitor with a proper rating is recommended for protecting the relay contacts when a motor is used as a load. The capacitor should be rated enough to withstand the back emf that is generated by the motor. Please see the diagram below for connection details.

Please note that the relay modules are NOT shipped with back emf suppression devices pre-installed. The exact kind of suppression device and the parameters of the selected device can vary depending on the load itself. Some of the parameters that affect the suppression device selection are the inductance of the load, power supply voltage, load current, physical

size/structure of the load, etc.. It is obvious that it is impossible for us to predict these parameters and design required back emf suppression device and incorporate that on the board. So we believe this is a task best left to the module user. There is an excellent article on designing back emf suppression on Wikipedia at [http://en.wikipedia.org/wiki/Flyback\\_diode](http://en.wikipedia.org/wiki/Flyback_diode) ([https://en.wikipedia.org/wiki/Flyback\\_diode](https://en.wikipedia.org/wiki/Flyback_diode))

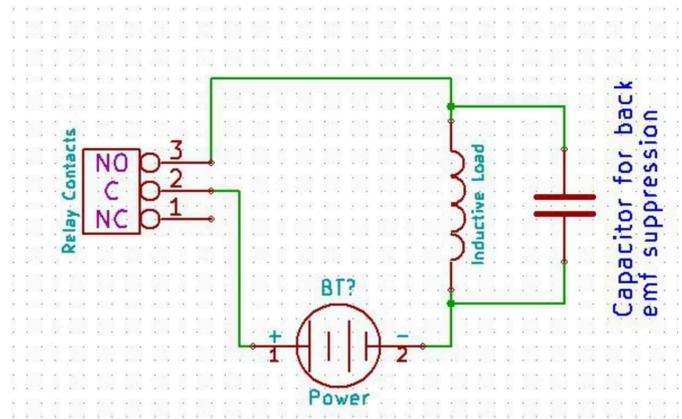

(<https://numato.com/blog/wp-content/uploads/2016/02/CapacitiveSnubber.jpg>)


Capacitor As Snubber

## Analog to Digital Converters (ADCs)

Prodigy ZRX devices do support Analog to Digital Conversion on some of the GPIO terminals. A list of GPIOs that supports analog function in this product is listed elsewhere in this document. GPIOs don't need to be configured especially in order to use them as analog inputs. Simply reading the Analog Input Register corresponding to the IO will automatically put the IO into Analog Input mode and read the analog value. The resolution of the ADC on this product is 12 bits. The input voltage range of the ADC is 0 – 3.3V.

# GPIO with Switches

(<https://numato.com/help/wp->

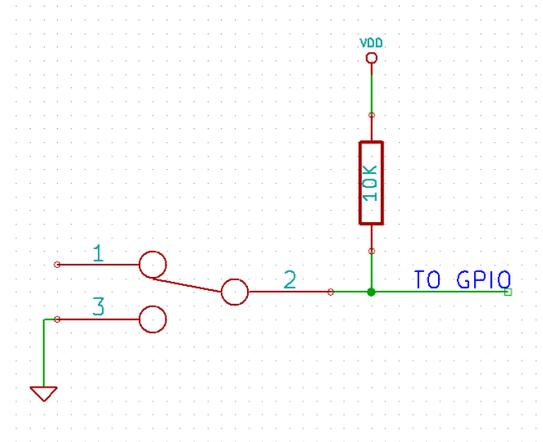

content/uploads/2016/01/USBGpio\_Switch\_connection\_diagram.png) It is possible to read the position of a switch that is connected to a GPIO. An SPST or SPDT switch is recommended to use with GPIOs. Push switches that maintain the contacts closed only for a very short time so using them is discouraged. The fundamental idea of using a switch with GPIO is to have the switch cause a voltage level change at the GPIO pin when pressed. Usually, this is achieved by using an external pull-up resistor along with the switch. The pull up resistor is connected between the GPIO and VDD and the switch is connected between the GPIO and ground. When the switch is not pressed, the pull-up resistor will cause the GPIO to stay at the VDD voltage level. When the switch is pressed, the GPIO is short-circuited to the ground and stays at zero voltage. This change in voltage and thus the position of the switch can be read by simply reading the Discrete Input bit corresponding to the GPIO.

## Technical Specifications

Parameter	Value	Unit
Number of relays	16/32/64	
Number of GPIOs	8	
Number of analog inputs (Multiplexed with GPIOs)	8/8/6	
Power supply voltage (External)	12	V

### IO Specifications

Maximum IO source current – ZRX16/ZRX32 : IO0, IO7	15	mA
Maximum IO source current – ZRX16/ZRX32 : IO1 – IO6	25	mA
Maximum IO source current – ZRX64 : IO0	15	mA

Parameter	Value	Unit
Maximum IO source current – ZRX64 : IO1 – IO7	25	mA
Maximum IO sink current – ZRX16/ZRX32 : IO0, IO7	15	mA
Maximum IO sink current – ZRX16/ZRX32 : IO1 – IO6	25	mA
Maximum IO sink current – ZRX64 : IO0	15	mA
Maximum IO sink current – ZRX64 : IO1 – IO7	25	mA
GPIO input low voltage	0.8	V
GPIO input high voltage	2	V
GPIO output low voltage	0	V
GPIO output high voltage	3.3	V
<b>ADC Specifications</b>		
Resolution	12	bits
Full scale range	0 – 3.3	V
Reference voltage	3.3	V
<b>Relay Specifications</b>		
Nominal relay coil voltage	12	V
Nominal coil power consumption (per relay)	120	mW
Relay contact material	Silver Alloy	
Contact rating	5A/ 250V AC 5A/ 30V DC	
Maximum switching voltage	245VAC/ 30VDC	
Maximum switching current	5	A
Maximum switching power	250VA/ 150W	
Contact resistance (initial)	100	mΩ
Insulation resistance	1000	MΩ
Life expectancy (Electrical)	50,000	Operations (5A 250VAC/24VDC, Resistive load)
Life expectancy (Mechanical)	20000000	Operations

Parameter	Value	Unit
Maximum switching on response time	10	mS
Maximum switching off response time	5	mS
Shock resistance (Functional)	98	m/s <sup>2</sup>
Shock resistance (Destructive)	980	m/s <sup>2</sup>
Vibration resistance	10Hz to 55Hz 1.5mm DA	
<b>Other Information</b>		
USB Vendor ID	0x2A19	
USB Product ID	ZRX64 - 0x2501 ZRX32 - 0x2502 ZRX16 - 0x2503	

## Technical Documents

HF49FD Miniature Power Relay datasheet ([http://www.hongfa.com:8080/pdfjs/web/viewer.html?file=/Uploads/PDF/HF49FD\\_en.pdf&stamp=1562913617036](http://www.hongfa.com:8080/pdfjs/web/viewer.html?file=/Uploads/PDF/HF49FD_en.pdf&stamp=1562913617036))

## Frequently Asked Questions (FAQs)

**Q.** What are the serial parameters I need to use when communicating with this board?

**A.** Since this module uses USB as the underlying transport mechanism, most of the serial parameters do not affect the communication. You can leave all parameters to any legal value (Eg: 2400, 4800, 9600, etc... for baud rate) except Flow control. Flow control needs to be set to "None".

**Q.** Where do I find the driver for this product?

**A.** Visit <http://numato.com> (<https://numato.com>) and navigate to the product page. There will be a link to download windows driver. Linux does not require driver installation since in most cases they are shipped with the driver pre-installed.

**Q.** Why there is no .sys or .exe file in the Windows driver package I downloaded?

**A.** This product uses the USB CDC driver binary which is already present on Windows. All Windows versions (with the exception of Embedded Editions) has this driver binary installed by default. The .inf and .cat files present in the zip file helps Windows identify the device properly and associate the appropriate driver (.sys) to the device

**Q.** Does this product work with Linux?

**A.** Yes, this product works with Linux. Please see more details on how to use this product with Linux elsewhere in this document.

**Q.** Does this product work with Mac OSX?

**A.** Yes, this product works with Mac OSX. Please see more details on how to use this product with Mac elsewhere in this document.

**Q.** What is the software that this product work with?

**A.** This product works with almost any software that has support for standard Modbus. Some examples can be found elsewhere in this document. Different software is written by different developers with different purposes in mind. So you may encounter some software that may not work with this product. But usually, alternatives are available in most if not all cases.

**Q.** I'm using x language for programming. How do I find out if this language can be used to program and control the GPIO module?

**A.** Find out if the language of interest supports some kind of APIs/Functions/Components for serial communication. If it does, most likely you should be able to use that language with this module. It may also be possible to find libraries such as libModbus that offers high-level APIs. Using such libraries can speed up development quite a bit.

**Q.** I need a customized version of this product, can Numato Lab do the customization for me?

**A.** Yes, we can definitely do customization but there may be minimum order requirements depending on the level of customization required. Please write to [help@numato.com](mailto:help@numato.com) for a quote.

**Q.** Where can I buy this product?

**A.** All Numato products can be ordered directly from our web store <http://www.numato.com> (<http://www.numato.com>). We accept major credit cards and Paypal and ship to almost all countries with a few exceptions. We do have distributors in many countries where you can place your order. Please find the current list of distributors at <http://numato.com/distrib> (<https://numato.com/where-to-buy/>).