




Adafruit Ultimate GPS HAT for Raspberry Pi

Created by lady ada

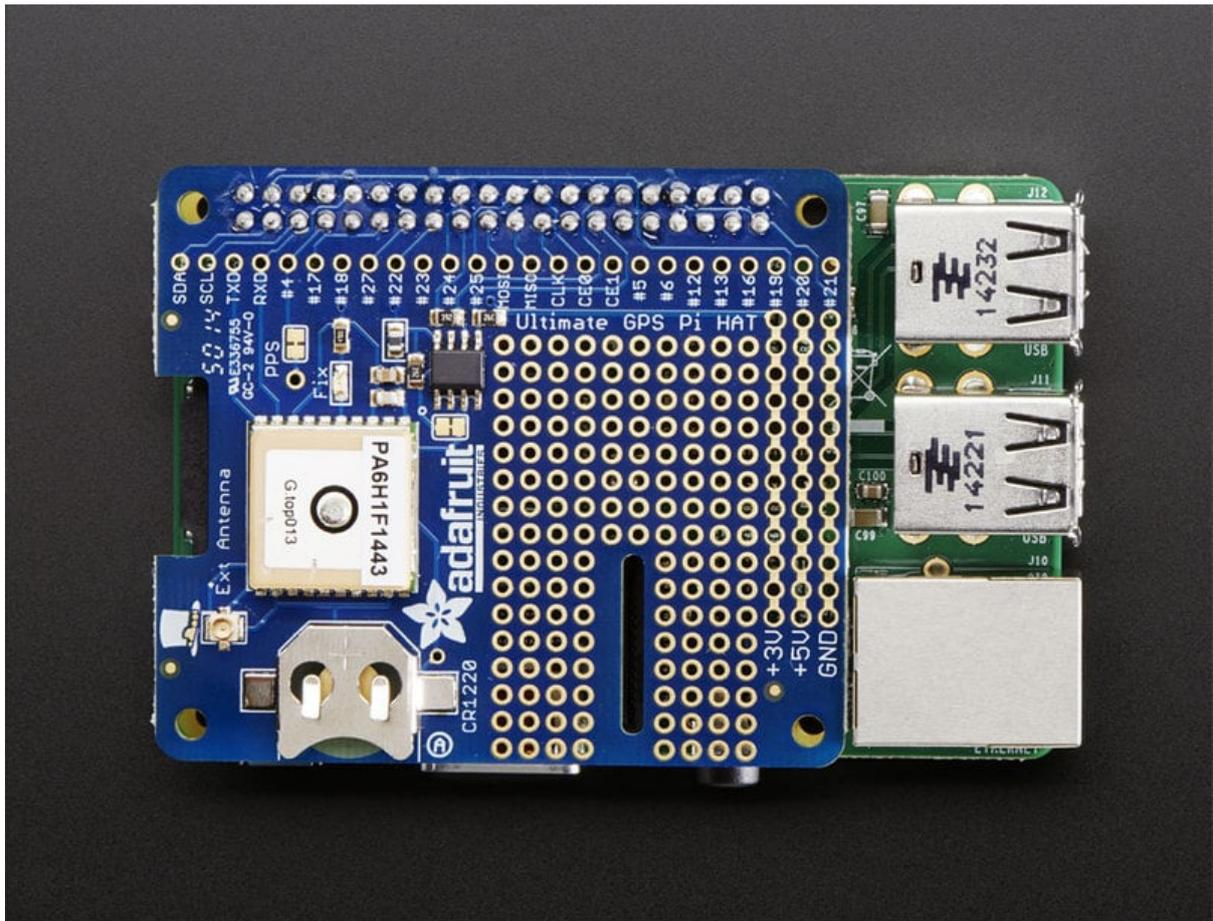


<https://learn.adafruit.com/adafruit-ultimate-gps-hat-for-raspberry-pi>

Last updated on 2025-06-19 02:33:04 PM EDT

Table of Contents

Overview	3
Pinouts	4
<ul style="list-style-type: none">• Serial Console Pins• PPS Pin• HAT EEPROM	
Pi GPS Setup	5
<ul style="list-style-type: none">• Set up the Pi to release the console pins	
Basic Test	8
<ul style="list-style-type: none">• Serial test	
Use 'gpsd'	12
<ul style="list-style-type: none">• Installing a GPS Daemon (gpsd)• Configure gpsd• Enable PPS• More info!	
External Antenna	15
Battery Backup	16
Downloads	17
<ul style="list-style-type: none">• Files• Schematic• Fabrication Print	

Overview

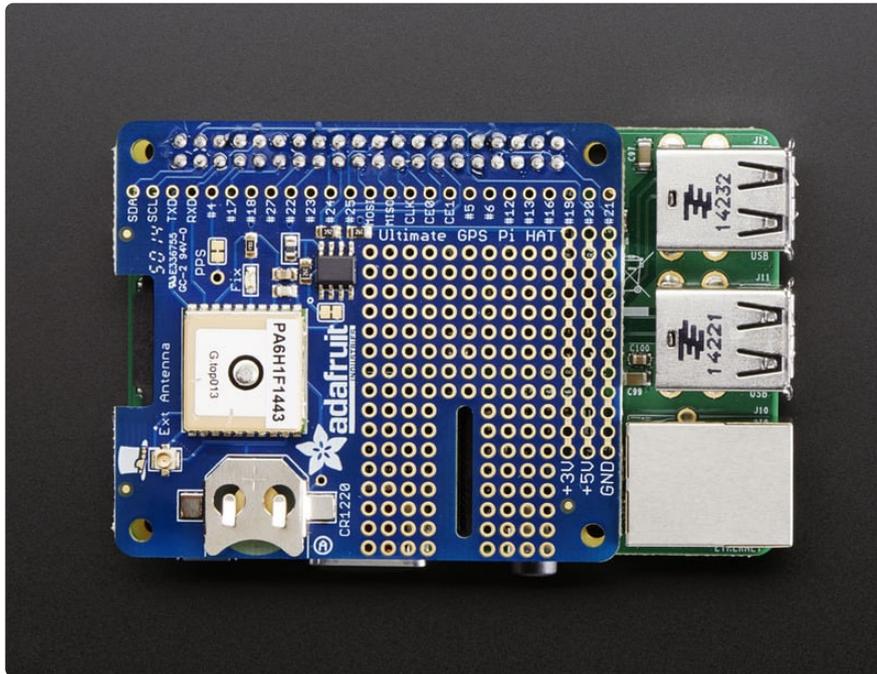

It's 10PM, do you know where your Pi is? If you had this Pi HAT, you would! This new HAT from Adafruit adds our celebrated Ultimate GPS on it, so you can add precision time and location to most Raspberry Pi boards (anything with the 40-pin GPIO "HAT" header; early Pi models with a 26-pin header are not compatible, nor are bare Compute Module boards).

Here's the low-down on the GPS module:

- -165 dBm sensitivity, 10 Hz updates, 66 channels
- Only 20mA current draw
- Built in Real Time Clock (RTC) - slot in a CR1220 backup battery for 7-years or more of timekeeping even if the Pi is off!
- PPS output on fix, by default connected to pin #4
- We have received reports that it works up to ~32Km altitude (the GPS theoretically does not have a limit until 40Km)
- Internal patch antenna which works quite well when used outdoors + u.FL connector for external active antenna for when used indoors or in locations without a clear sky view
- Fix status LED blinks to let you know when the GPS has determined the current coordinates


This HAT takes over the Pi's hardware UART to send/receive data to and from the GPS module. So, if you need to use the RX/TX pins with a console cable, you cannot

also use this HAT. Instead, you'll have to use a monitor and keyboard to log in, or use ssh to connect over the network to your Pi.

Comes as a fully assembled GPS + PCB and an additional 2x20 GPIO header. Some light soldering is required to attach the 2x20 GPIO header to the HAT but it's fast and easy for anyone with a soldering iron and solder. [You can also swap the plain female header we have with a 'stacky' type that lets you plug in a hat or GPIO cable on top](http://adafru.it/2223) (<http://adafru.it/2223>) or a [slim ultra-low-profile header](http://adafru.it/2243). (<http://adafru.it/2243>)

Even with a low-profile header installed, the GPS module itself adds sufficient thickness that the Pi + HAT won't fit in most close-fitting Pi cases. If full protection from the elements is required, you'll have to improvise or find a [larger plastic enclosure](http://adafru.it/905) (<http://adafru.it/905>), perhaps with cable glands.

Pinouts

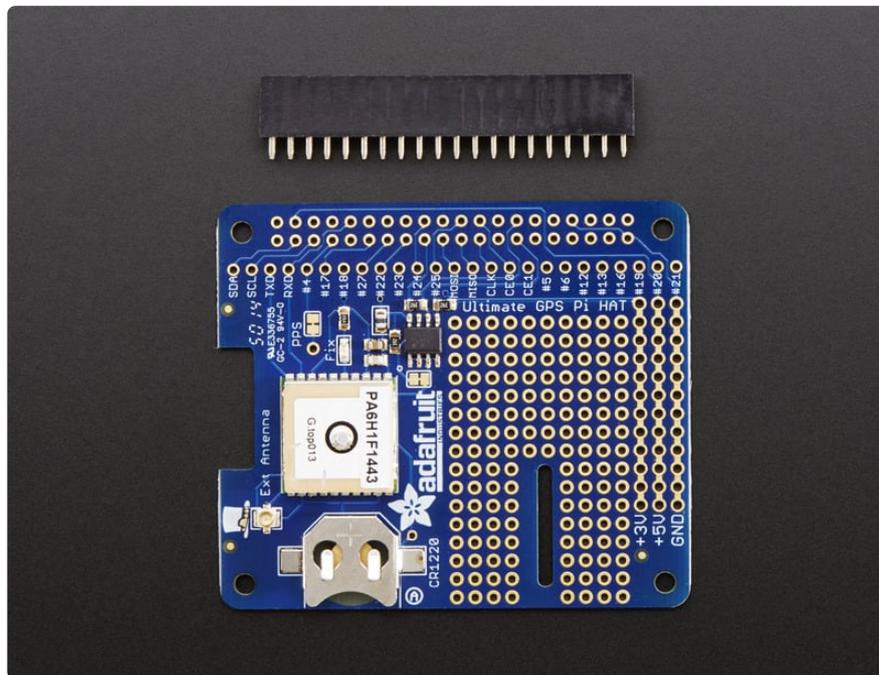

This HAT is pretty simple but its worth going thru what pins are used for what!

The Ultimate GPS uses the following GPIO pins: **TXD**, **RXD**, **#4** and **EEDATA/EECLK**

Serial Console Pins

The Raspberry Pi has only one serial port, and you do need serial to chat to a GPS so we will take over the **RXD** and **TXD** pins.

PPS Pin

GPS's can output a 'pulse per second' for synchronizing the time. We have a breakout for this and a closed jumper that connects it to **GPIO#4** - if you do not need PPS and want to use #4 for something else, just cut the little connection on the PPS PCB line.

HAT EEPROM

EEDATA/EECLK are connected to a 24C32 EEPROM that contains the name and maker of this HAT (it's not used by the Pi Kernel just yet)

Pi GPS Setup

[Don't forget to also read our Ultimate GPS tutorial which has a lot of information about this GPS module and datasheets/example code that you will find handy! \(https://adafru.it/aTI\)](#)


Once you follow these steps, you will no longer have a log in console on the Serial RX/TX pins, you will have to use a monitor+keyboard or ssh into your Pi! (or remove the HAT and undo the edits)

Set up the Pi to release the console pins


Start by logging into your Pi using a monitor/keyboard or via ssh

To disable the login shell and serial output quickly use the following command-line approach or if you prefer the multi-step graphical menu. Either way you need to do a reboot after.


```
sudo raspi-config nonint do_serial_cons 1
sudo reboot
```

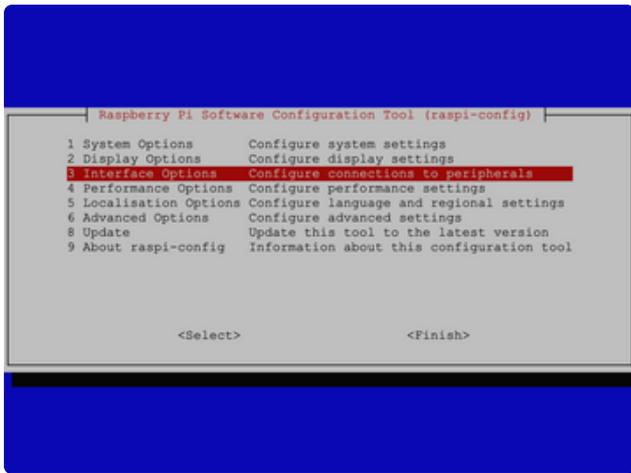

Run `sudo raspi-config` to configure the system, and select **Interfacing Options**.

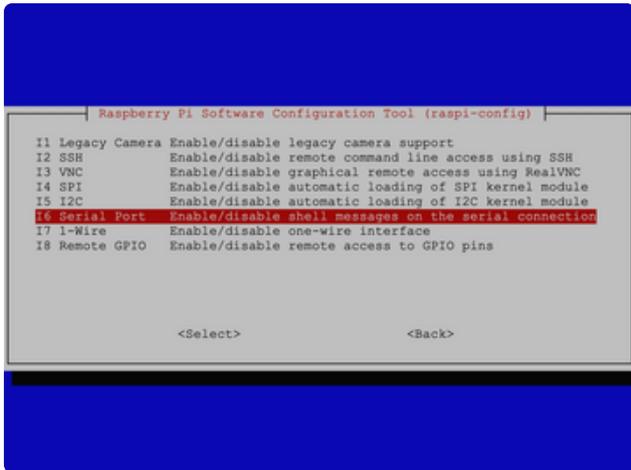


Select **Serial Port**.

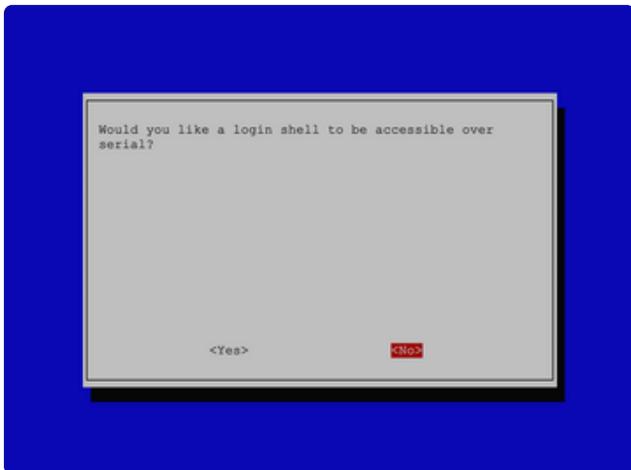


When asked about a login shell, select **No**.



Then select **Yes** to keep the serial port hardware enabled.

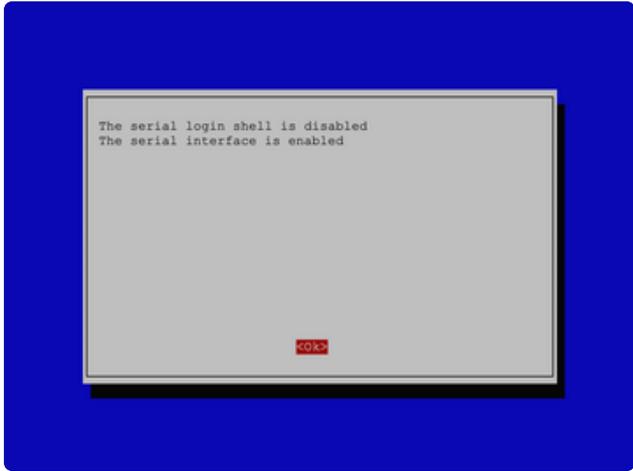

The system will confirm your choices: login shell disabled, interface enabled. Select **OK**.

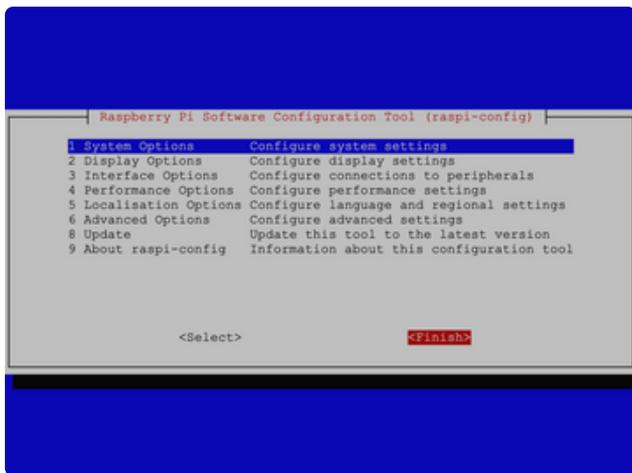

That's it! You'll be back at the main menu. Press the tab key a couple times to select **Finish**, and select **No** when asked to reboot the system.



Instead, we'll shut down the Pi to install hardware...

Run `sudo shutdown -h now` for a safe and orderly system shutdown. Wait 15 seconds or so before removing power, or watch for the status LED to stop blinking.

Plug in the GPS HAT to the Pi's GPIO header and re-connect power to the system. Log in and you can proceed with testing the GPS!

Basic Test

We can get started by testing the GPS right at the command line.

Before you start, you'll want to make sure the GPS module has a 'fix' - that means it has received enough data from satellites to determine the location.

You can quickly determine fix status by looking at the Red LED on the GPS Hat:

- Blinking on and off once every other second - NO FIX
- Blinking once per 10 seconds or so - HAS FIX

You may need to put the Pi near a window or attach an external antenna. Once it has a fix, continue!

The Pi 5 uses /dev/ttyAMA0

Serial test

Lets start by just reading the 'raw' data from the GPS on the command line. Run:

```
stty -F /dev/serial0 raw 9600 cs8 clocal -cstopb
```

To set /dev/serial0 (the serial port used by the GPS HAT) to raw data (raw) 9600 baud (9600) 8-bits (cs8) no modem control (clocal) and 1 stop bit (-cstopb)


It's pretty picky so please use those settings and not noodle with them too much unless you're sure!

Now run:

```
cat /dev/serial0
```

To read raw data directly from the GPS HAT

You should see something like this!

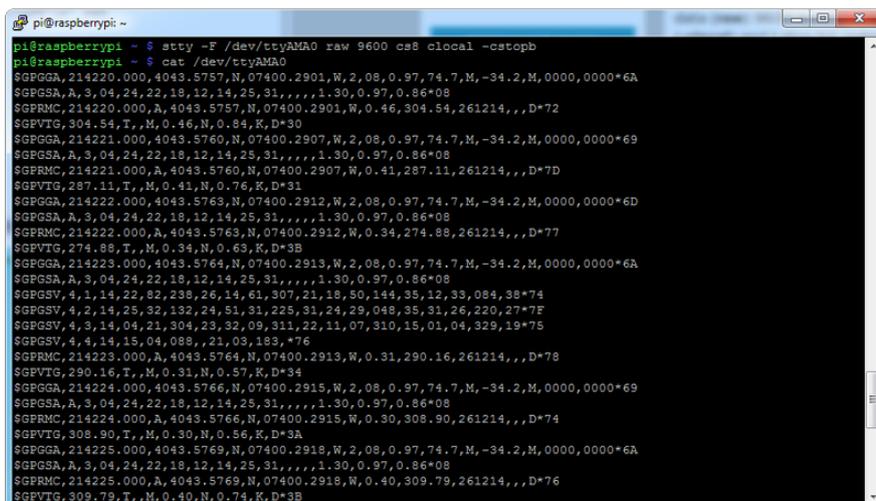


```
pi@raspberrypi ~  
pi@raspberrypi ~$ stty -F /dev/ttyAMA0 raw 9600 cs8 clocal -cstopb  
pi@raspberrypi ~$ cat /dev/ttyAMA0  
$GPRMC,21.4220,0.00,A,4043.5757,N,07400.2901,W,2.08,0.97,74.7,M,-34.2,M,0.00,0.0000*6A  
$GPGSA,A,3,04,24,22,18,12,14,25,31,,,,,1.30,0.97,0.86*08  
$GPRMC,21.4220,0.00,A,4043.5757,N,07400.2901,W,0.46,304.54,261214,,,D*72  
$GPVTG,304.54,T,,M,0.46,N,0.84,K,D*30  
$GPGGA,21.4221,0.00,4043.5760,N,07400.2907,W,2.08,0.97,74.7,M,-34.2,M,0.00,0.0000*69  
$GPGSA,A,3,04,24,22,18,12,14,25,31,,,,,1.30,0.97,0.86*08  
$GPRMC,21.4221,0.00,A,4043.5760,N,07400.2907,W,0.41,287.11,261214,,,D*7D  
$GPVTG,287.11,T,,M,0.41,N,0.76,K,D*31  
$GPGGA,21.4222,0.00,4043.5763,N,07400.2912,W,2.08,0.97,74.7,M,-34.2,M,0.00,0.0000*6D  
$GPGSA,A,3,04,24,22,18,12,14,25,31,,,,,1.30,0.97,0.86*08  
$GPRMC,21.4222,0.00,A,4043.5763,N,07400.2912,W,0.34,274.88,261214,,,D*77  
$GPVTG,274.88,T,,M,0.34,N,0.63,K,D*3B  
$GPGGA,21.4223,0.00,4043.5764,N,07400.2913,W,2.08,0.97,74.7,M,-34.2,M,0.00,0.0000*6A  
$GPGSA,A,3,04,24,22,18,12,14,25,31,,,,,1.30,0.97,0.86*08  
$GPGSV,4,1,14,22,82,238,26,14,61,307,21,18,50,144,35,12,33,084,38*74  
$GPGSV,4,2,14,25,32,132,24,51,31,225,31,24,29,048,35,31,26,220,27*7F  
$GPGSV,4,3,14,04,21,304,23,32,09,311,22,11,07,310,15,01,04,329,19*75  
$GPGSV,4,4,14,15,04,088,,21,03,183,*76  
$GPRMC,21.4223,0.00,A,4043.5764,N,07400.2913,W,0.31,290.16,261214,,,D*78  
$GPVTG,290.16,T,,M,0.31,N,0.57,K,D*34  
$GPGGA,21.4224,0.00,4043.5766,N,07400.2915,W,2.08,0.97,74.7,M,-34.2,M,0.00,0.0000*69  
$GPGSA,A,3,04,24,22,18,12,14,25,31,,,,,1.30,0.97,0.86*08  
$GPRMC,21.4224,0.00,A,4043.5766,N,07400.2915,W,0.30,308.90,261214,,,D*74  
$GPVTG,308.90,T,,M,0.30,N,0.56,K,D*3A  
$GPGGA,21.4225,0.00,4043.5769,N,07400.2918,W,2.08,0.97,74.7,M,-34.2,M,0.00,0.0000*6A  
$GPGSA,A,3,04,24,22,18,12,14,25,31,,,,,1.30,0.97,0.86*08  
$GPRMC,21.4225,0.00,A,4043.5769,N,07400.2918,W,0.40,309.79,261214,,,D*76  
$GPVTG,309.79,T,,M,0.40,N,0.74,K,D*3B
```

This is the raw GPS "NMEA sentence" output from the GPS module. There are a few different kinds of NMEA sentences, the most common ones people use are the **\$GPRMC** (Global Positioning Recommended Minimum Coordinates or something

like that) and the **\$GPGGA** sentences. These two provide the time, date, latitude, longitude, altitude, estimated land speed, and fix type. Fix type indicates whether the GPS has locked onto the satellite data and received enough data to determine the location (2D fix) or location+altitude (3D fix).

[For more details about NMEA sentences and what data they contain, check out this site \(https://adafru.it/aMk\)](https://adafru.it/aMk)

If your data looks like this, with a lot of commas, with no data in between them. That's because this module is does not have a 'fix'. **DONT FORGET** To get a fix, we need to put the module or antenna outside or have it able to see the sky!

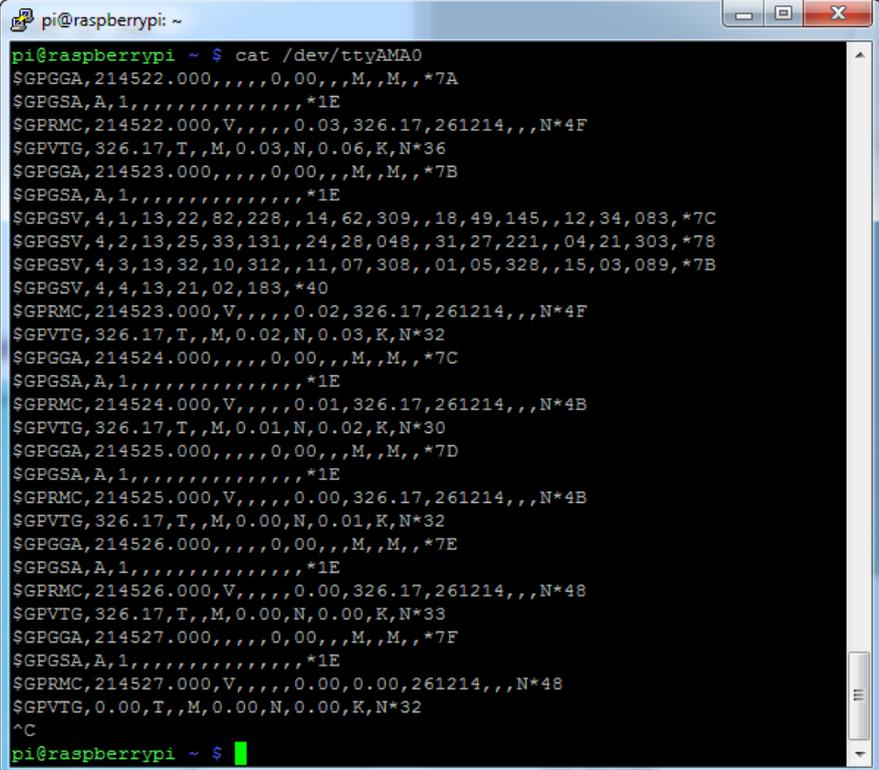

```
pi@raspberrypi ~ $ cat /dev/ttyAMA0
$GPGGA,214522.000,,,,,0,00,,M,M,,*7A
$GPGSA,A,1,,,,,,,,,,,,,*1E
$GPRMC,214522.000,V,,,,,0.03,326.17,261214,,,N*4F
$GPVTG,326.17,T,M,0.03,N,0.06,K,N*36
$GPGGA,214523.000,,,,,0,00,,M,M,,*7B
$GPGSA,A,1,,,,,,,,,,,,,*1E
$GPGSV,4,1,13,22,82,228,,14,62,309,,18,49,145,,12,34,083,*7C
$GPGSV,4,2,13,25,33,131,,24,28,048,,31,27,221,,04,21,303,*78
$GPGSV,4,3,13,32,10,312,,11,07,308,,01,05,328,,15,03,089,*7B
$GPGSV,4,4,13,21,02,183,*40
$GPRMC,214523.000,V,,,,,0.02,326.17,261214,,,N*4F
$GPVTG,326.17,T,M,0.02,N,0.03,K,N*32
$GPGGA,214524.000,,,,,0,00,,M,M,,*7C
$GPGSA,A,1,,,,,,,,,,,,,*1E
$GPRMC,214524.000,V,,,,,0.01,326.17,261214,,,N*4B
$GPVTG,326.17,T,M,0.01,N,0.02,K,N*30
$GPGGA,214525.000,,,,,0,00,,M,M,,*7D
$GPGSA,A,1,,,,,,,,,,,,,*1E
$GPRMC,214525.000,V,,,,,0.00,326.17,261214,,,N*4B
$GPVTG,326.17,T,M,0.00,N,0.01,K,N*32
$GPGGA,214526.000,,,,,0,00,,M,M,,*7E
$GPGSA,A,1,,,,,,,,,,,,,*1E
$GPRMC,214526.000,V,,,,,0.00,326.17,261214,,,N*48
$GPVTG,326.17,T,M,0.00,N,0.00,K,N*33
$GPGGA,214527.000,,,,,0,00,,M,M,,*7F
$GPGSA,A,1,,,,,,,,,,,,,*1E
$GPRMC,214527.000,V,,,,,0.00,0.00,261214,,,N*48
$GPVTG,0.00,T,M,0.00,N,0.00,K,N*32
^C
pi@raspberrypi ~ $
```

GPS modules will always send data EVEN IF THEY DO NOT HAVE A FIX! In order to get 'valid' (not-blank) data you must have the GPS module directly outside, with the square ceramic antenna pointing up with a clear sky view. In ideal conditions, the module can get a fix in under 45 seconds. however depending on your location, satellite configuration, solar flares, tall buildings nearby, RF noise, etc it may take up to half an hour (or more) to get a fix! This does not mean your GPS module is broken, the GPS module will always work as fast as it can to get a fix.

OK lets look at a good NMEA sentence with 'fix'

Something that starts with \$GPRMC like:

```
$GPRMC,194509.000,A,4042.6142,N,07400.4168,W,2.03,221.11,160412,,A*77
```

This line is called the RMC (Recommended Minimum) sentence and has pretty much all of the most useful data. Each chunk of data is separated by a comma.

The first part **194509.000** is the current time **GMT** (Greenwich Mean Time). The first two numbers **19** indicate the hour (1900h, otherwise known as 7pm) the next two are the minute, the next two are the seconds and finally the milliseconds. So the time when this screenshot was taken is 7:45 pm and 9 seconds. The GPS does not know what time zone you are in, or about "daylight savings" so you will have to do the calculation to turn GMT into your timezone

The second part is the 'status code', if it is a **V** that means the data is **Void** (invalid). If it is an **A** that means its **Active** (the GPS could get a lock/fix)

The next 4 pieces of data are the geolocation data. According to the GPS, my location is **4042.6142,N** (Latitude 40 degrees, 42.6142 decimal minutes North) & **07400.4168,W**. (Longitude 74 degrees, 0.4168 decimal minutes West) To look at this location in Google maps, type **+40° 42.6142', -74° 00.4168'** into the [google maps search box \(https://adafru.it/aMI\)](https://adafru.it/aMI) . Unfortunately gmaps requires you to use +/- instead of NSWE notation. N and E are positive, S and W are negative.

People often get confused because the GPS is working but is "5 miles off" - this is because they are not parsing the lat/long data correctly. Despite appearances, the geolocation data is NOT in decimal degrees. It is in degrees and minutes in the following format: Latitude: DDMM.MMMM (The first two characters are the degrees.) Longitude: DDDMM.MMMM (The first three characters are the degrees.)

The next data is the ground speed in knots. We're going **2.03** knots

After that is the tracking angle, this is meant to approximate what 'compass' direction we're heading at based on our past travel

The one after that is **160412** which is the current date (this sentence was first 'grabbed' on 16th of April, 2012).

Finally there is the ***XX** data which is used as a data transfer checksum

Once you get a fix using your GPS module, verify your location with google maps (or some other mapping software). Remember that GPS is often only accurate to 5-10 meters and worse if you're indoors or surrounded by tall buildings.

Use 'gpsd'

You can always just read that raw data, but its much nicer if you can have some Linux software prettify it. We'll try out **gpsd** which is a GPS-handling Daemon (background-helper)

Installing a GPS Daemon (gpsd)

The first step is installing some software on your Raspberry Pi that understands the serial data that your GPS module is providing via `/dev/serial0`.

Thankfully other people have already done all the hard work for you of properly parsing the raw GPS data, and we can use (amongst other options) a nice little package named 'gpsd', which essentially acts as a layer between your applications and the actual GPS hardware, gracefully handling parsing errors, and providing a common, well-defined interfaces to any GPS module.

To install `gpsd`, make sure your Pi has an Internet connection and run the following commands from the console:

```
sudo apt-get update
sudo apt-get install gpsd gpsd-clients
```

And install the software as it prompts you to do.

Configure gpsd

Modify the system-wide GPSD config file to support your serial port.

```
sudo nano /etc/default/gpsd
```

A Pi 5 would use:

```
DEVICES="/dev/ttyAMA0"
```

All other models of Pi would have a config file that looks like the following:

```
# Devices gpsd should collect to at boot time.
# They need to be read/writeable, either by user gpsd or the group dialout.
DEVICES="/dev/serial0"

# Other options you want to pass to gpsd
GPSD_OPTIONS="-n"

# Automatically hot add/remove USB GPS devices via gpsdctl
USB AUTO="true"
```

After updating the configuration file reboot to verify gpsd correctly starts on its own and you can run the following gps related utilities:

- gpsmon
- cgps
- ppstest

```
sudo reboot
```

```
cgps
```

```

Time:          2025-06-19T18:21:08.000Z (0)
Latitude:     47.29783333 N
Longitude:    122.50336667 W
Alt (HAE, MSL): 8.900, 26.500 m
Speed:        0.28 km/h
Track (true, var): 355.8, 15.3 deg
Climb:        0.00 m/min
Status:       3D DGPS FIX (9 secs)
Long Err (XDOP, EPX): 1.03, +/- 3.9 m
Lat Err (YDOP, EPY): 1.70, +/- 6.4 m
Alt Err (VDOP, EPV): 2.95, +/- 5.5 m
2D Err (HDOP, CEP): 1.96, +/- 6.6 m
3D Err (PDOP, SEP): 3.54, +/- 7.9 m
Time Err (TDOP): 2.48
Geo Err (GDOP): 4.38
ECEF X, VX:   n/a n/a
ECEF Y, VY:   n/a n/a
ECEF Z, VZ:   n/a n/a
Speed Err (EPS): +/- 45.9 km/h
Track Err (EPD): n/a
Time offset:  1.000355921 s
Grid Square:  CN87rh91

```

GNSS	PRN	Elev	Azim	SNR	Use
GP 5	5	49.0	58.0	18.0	Y
GP 15	15	23.0	134.0	18.0	Y
GP 18	18	59.0	275.0	20.0	Y
GP 23	23	30.0	203.0	24.0	Y
GP 25	25	13.0	186.0	16.0	Y
GP 29	29	71.0	124.0	19.0	Y
GP 13	13	17.0	95.0	0.0	N
GP 16	16	19.0	318.0	0.0	N
GP 20	20	19.0	48.0	0.0	N
SB131	44	35.0	172.0	28.0	N

```
gpsmon
```

```

/dev/ttyAMA0          NMEA0183>
Time: 2025-06-19T18:21:51.000Z  Lat: 47 17.870100' N  Lon: 122 30.201900' W
Cooked TPV
GPGGA GPGSA GPRMC GPZDA GPGSV
Sentences
SVID PRN Az El SN HU Time: 182151.000 Time: 182151.000
GP 5 5 58 48 21 Y Latitude: 4717.8701 N Latitude: 4717.8701
GP 18 18 276 59 23 Y Longitude: 12230.2019 W Longitude: 12230.2019
GP 23 23 203 31 28 Y Speed: 0.70 Altitude: 26.2
GP 25 25 186 12 14 Y Course: 343.55 Quality: 2 Sats: 05
GP 29 29 125 70 15 Y Status: A FAA:D HDOP: 2.15
GP 13 13 95 17 0 N MagVar: RMC Geoid: -17.6
GP 15 15 133 23 0 N GGA
GP 16 16 318 19 0 N
GP 20 20 48 19 0 N
SB131 44 172 35 27 N
Mode: A3 Sats: UTC: RMS:
DOP H=2.15 V=2.92 P=3.62 MAJ: MIN:
TOFF: 0.462808679 ORI: LAT:
PPS: 0.000224737 LON: ALT:
GSV GSA + PPS GST

```

Enable PPS

PPS uses GPIO pin 4 on the GPS HAT and can work with the same setup using the GPS breakout. You do need to modify the kernel config.txt to support this setup. This means a reboot will be needed after updating the config.txt.

```
nano /boot/firmware/config.txt
# add this to the end of the file
dtoverlay=pps-gpio,gpiopin=4
```

```
pi@pi5:~ $ sudo ppstest /dev/pps0
trying PPS source "/dev/pps0"
found PPS source "/dev/pps0"
ok, found 1 source(s), now start fetching data...
source 0 - assert 1750357430.000213158, sequence: 13817 - clear 0.000000000,
sequence: 0
source 0 - assert 1750357431.000212074, sequence: 13818 - clear 0.000000000,
sequence: 0
source 0 - assert 1750357432.000212376, sequence: 13819 - clear 0.000000000,
sequence: 0
source 0 - assert 1750357433.000212085, sequence: 13820 - clear 0.000000000,
sequence: 0
```

Don't forget, you do need to have FIX to use these tools! If you have FIX and cgps always displays 'NO FIX' under status and then aborts after a few seconds, you may need to restart the gpsd service. You can do that via the following commands:

More info!

You can use **gpsd** to help you read data into other programming languages like C and Python using a variety of existins libraries


The following tutorials may be useful to you if you want to dig into this a bit further, and do something a bit more advanced with your GPS data:

- [GETTING GPS TO WORK ON A RASPBERRY PI \(https://adafru.it/aWL\)](https://adafru.it/aWL).
- [GPSD Client How-To \(https://adafru.it/eUC\)](https://adafru.it/eUC) ... including examples in C, C++ and Python
- The official [GPSD project pages \(https://adafru.it/aWN\)](https://adafru.it/aWN)
- [A nice writeup of using GPSd with python using threads to make it faster \(https://adafru.it/cGM\)](https://adafru.it/cGM)
- [Great forum post on how to setup time synchronization with a Raspberry Pi and the PPS output of the GPS HAT. \(https://adafru.it/fEW\)](https://adafru.it/fEW)

- [Another good write-up on how to configure a Pi to use GPS and the PPS output for time synchronization.](https://adafru.it/ytC) (<https://adafru.it/ytC>) Note that this guide uses GPIO18 for the PPS signal but the HAT uses GPIO4.

Doing something fun with GPS and tracking data? Be sure to post about it in the [Adafruit forums](https://adafru.it/forums) (<https://adafru.it/forums>) so everyone else can get inspired by it!

External Antenna

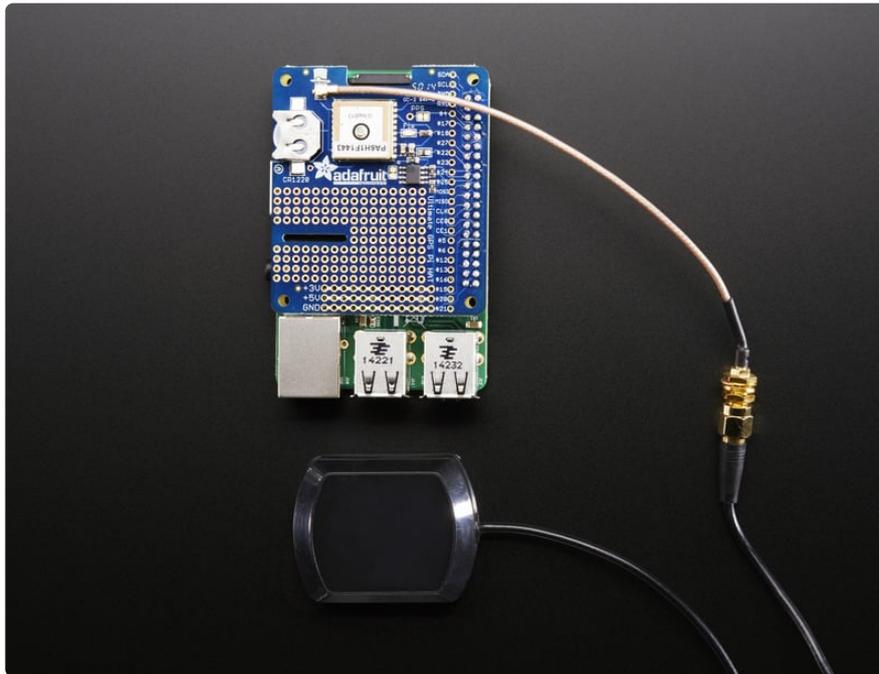

All Ultimate GPS modules have a built in patch antenna - this antenna provides -165 dBm sensitivity and is perfect for many projects. However, if you want to place your project in a box, it might not be possible to have the antenna pointing up, or it might be in a metal shield, or you may need more sensitivity. In these cases, [you may want to use an external active antenna.](http://adafru.it/960) (<http://adafru.it/960>)

[Active antennas draw current, so they do provide more gain but at a power cost. Check the antenna datasheet for exactly how much current they draw - its usually around 10-20mA.](http://adafru.it/960) (<http://adafru.it/960>)

Most GPS antennas use SMA connectors, which are popular and easy to use. However, an SMA connector would be fairly big on the GPS breakout so we went with a uFL connector - which is lightweight, small and easy to manufacture. If you don't need an external antenna it wont add significant weight or space but [its easy to attach a uFL->SMA adapter cable](http://adafru.it/851) (<http://adafru.it/851>). Then connect the GPS antenna to the cable.


The Ultimate GPS will automatically detect an external active antenna is attached and 'switch over' - you do not need to send any commands

There is an output sentence that will tell you the status of the antenna. `$PGTOP,11,x` where `x` is the status number. If `x` is `3` that means it is using the external antenna. If `x` is `2` it's using the internal antenna and if `x` is `1` there was an antenna short or problem.

On newer shields & modules, you'll need to tell the firmware you want to have this report output, you can do that by sending it the command `$PGCMD,33,1*6C`

Battery Backup

The GPS has a built in real time clock, which can keep track of time even when it power is lost and it doesn't have a fix yet. It can also help reduce fix times, if you expect to have a flakey power connection (say you're using solar or similar). To use the RTC, we need to insert a battery. There is holder on the HAT for a **CR1220** sized battery holder. We provide the holder but the battery is not included. You can use any 12mm coin cell - these are popular and we also carry them in the Adafruit shop.

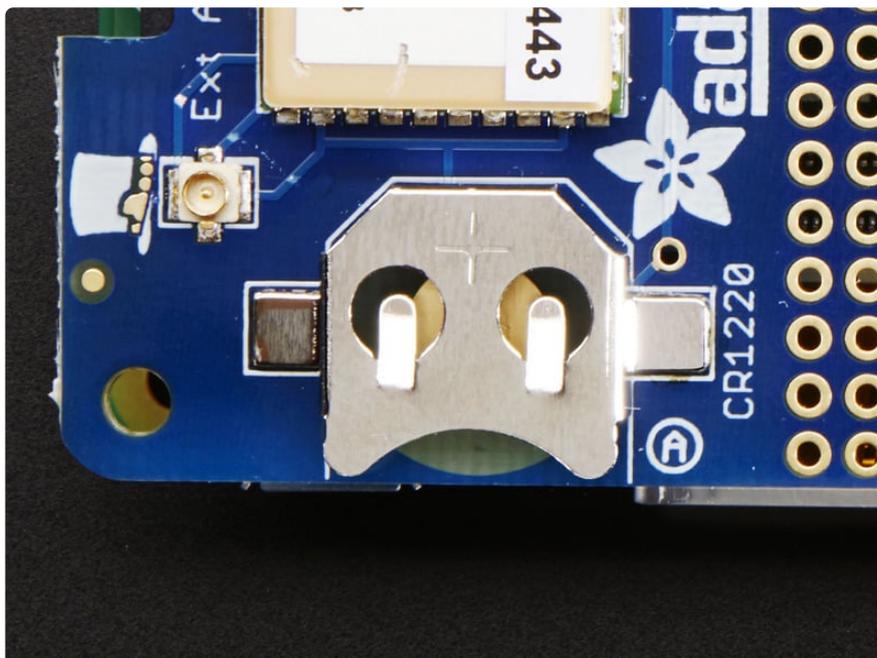

Remember, the GPS does not know what time zone you are in (even though it knows your location, there is no easy way to determine time zone without a massive lookup table) so all date/time data is in UTC (aka. Greenwich Mean Time)


The Pi's system clock can be synchronized from the GPS if no network time server is reachable, but this gets pretty technical and is beyond the scope of this guide. [Here's a tutorial elsewhere that might help \(https://adafru.it/108e\)](https://adafru.it/108e)...scroll down to section 4, since the GPS hardware is a bit different, just need the software steps.

Downloads

Files

- [MTK3329/MTK3339 command set sheet \(https://adafru.it/e7A\)](https://adafru.it/e7A) for changing the fix data rate, baud rate, sentence outputs, etc!
- [PMTK 'complete' datasheet \(https://adafru.it/uoe\)](https://adafru.it/uoe) (like the above but with even more commands)
- [Datasheet for the PA6H \(MTK3339\) GPS module itself \(https://adafru.it/aPO\)](https://adafru.it/aPO)
- [Fritzing object in the Adafruit Fritzing Library \(https://adafru.it/aP3\)](https://adafru.it/aP3)
- [EagleCAD PCB files on GitHub \(https://adafru.it/rKE\)](https://adafru.it/rKE)

Schematic

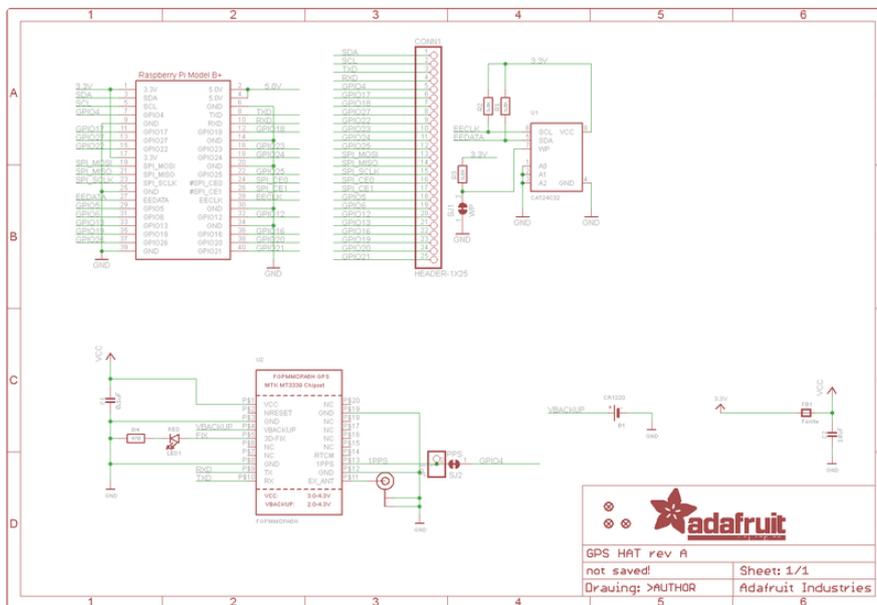

Fabrication Print

Dimensions in inches

